


Zero Clearance firebox GAS decorative fuel effect appliance

NOTE: Custom built to clients requirements to current standards

for Period Style Fireplaces Installation instructions into wood or block alcoves

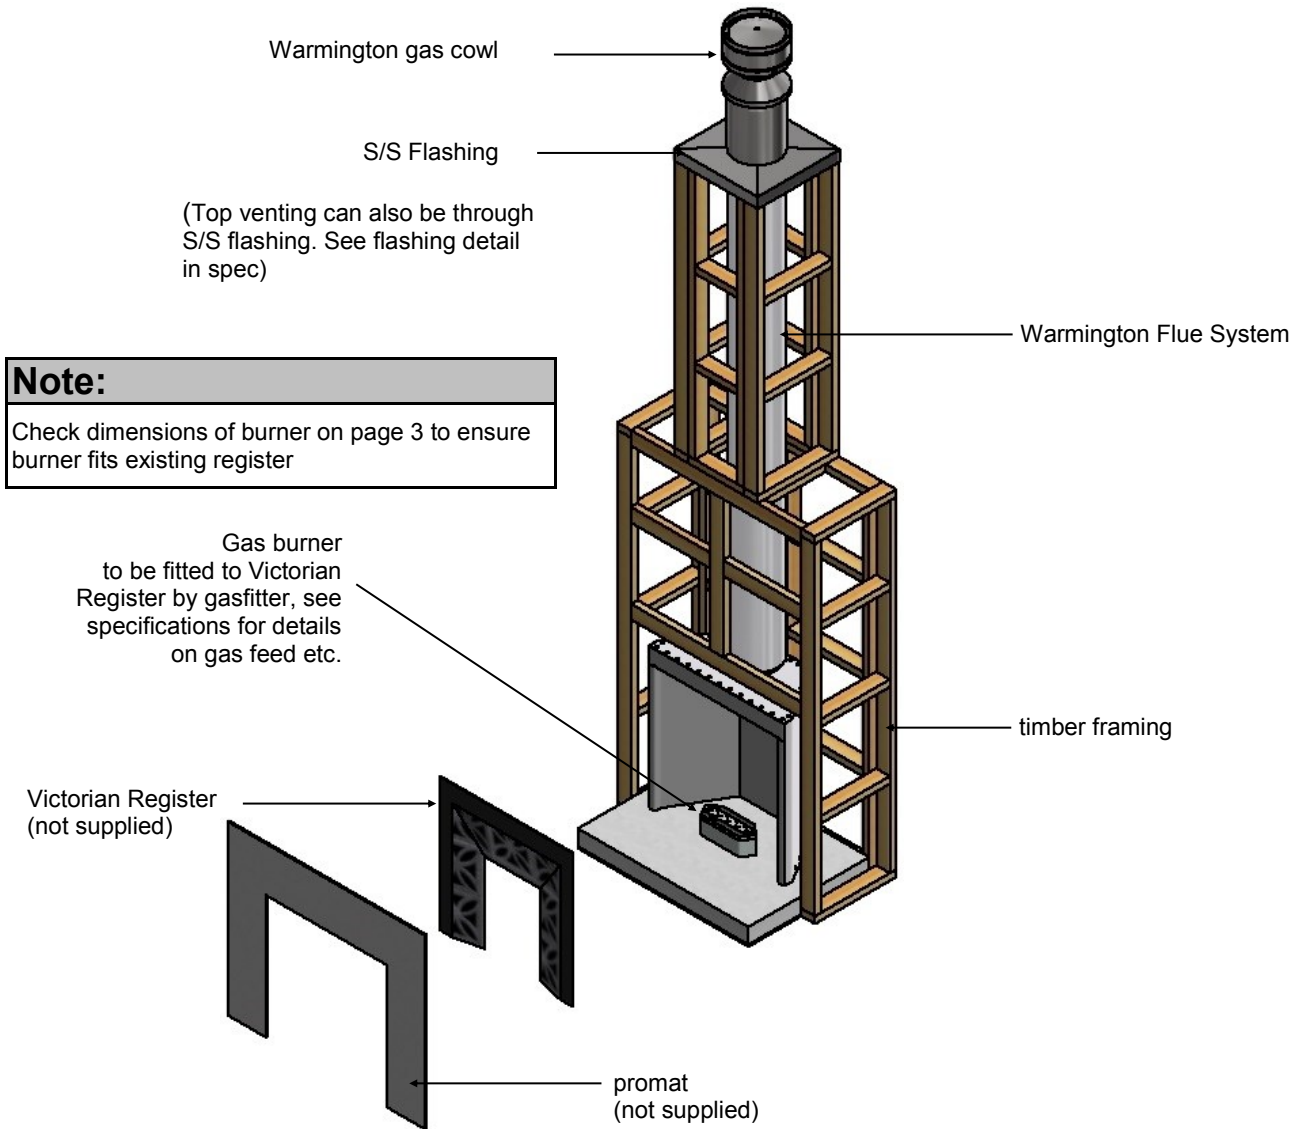

Note:
Check dimensions of burner on page 3 to ensure burner fits existing register

Related documents

Fire and flue system installation, and instructions to comply with NZS 5601.1:2013, 3645.1(Int):2010, 3645.2(Int):2010, 5266:2014, 2918:2001.

The fireplace is constructed and tested to comply with NZS 4558(int):2013 “Decorative gas log and other fuel effect appliances”.

Keep these instructions for further reference. Ensure that you have the correct and current installation details for the Warmington fireplace.

Installation

The Warmington unit is to be installed by a certified Warmington installer or an approved NZHHA installation technician.

See www.homeheat.co.nz/members for a certified NZHHA SFAIT Installer in your area.

A licenced certified gas fitter and licenced electrician are required to run power and gas supplies as required to the unit and any commissioning as part of the installation process. The heater must be installed according to these instructions and in compliance with all relevant building, gas fitting, electrical and other statutory regulations.

IMPORTANT

Read all the instructions carefully before commencing the Installation. Failure to follow these instructions may result in a fire hazard and void the warranty

POINTS TO CONSIDER PRIOR TO INSTALLATION

Location of the fire.

Open fires are better located at one end of a room or area, as they project the heat away from their opening .

Venting to the cavity.

This air is to allow the cavity to vent the warm air. This warm air helps keep the fire and flue system from getting too cold. If the flue and fire get too cold, the system may soot more often and require extra cleaning. Each fire has different ways of venting to the cavity.

The topography of the land.

The slope and position of the land in relation to the home has a bearing on how the wind will interact with the fire and flue system. Care needs to be taken to ensure that the flue termination is in the correct position to maximise performance .

The prevailing wind.

Care needs to be taken to ensure that the flue termination is in the correct position, as wind and gusts that hit the flue and cowl system may overcome the cowl, and draft back down the flue into the home. This can be a combination of down-draft and high pressure.

Hearth and Plinth:

The height of the hearth off the floor. The finishing or materials used for the hearth is to be allowed for at the design stage.

Positioning of the flue system:

There is a maximum distance that an offset flue can be installed. Refer to relevant standards.

Flue and Fire Clearance:

To be maintained to the Manufactures Instructions.

Pressure Differential, Venting & External Air into the Building :

All fires need air to burn and draw correctly. Kitchen fans, air conditioning units, high wind zones, naturally forming draft spaces; can all have an effect on the pressure difference from inside the building to the outside. A lower pressure in the building may induce a draft down the flue system and back into the building causing the fire to smoke or spill into the building.

Care needs to be taken at the design and installation stage to adequately vent the building, or some mechanical system to ensure that there is always a neutral or positive pressure at the fireplace and a negative pressure at the flue outlet.

This will ensure that the draft in the flue system is always to the outside.

“CAITEC AIR” the limits and requirements. See details in these Spec's, on www.warmington.co.nz or contact your local Authorised Retailer.

Wind Noise:

You may encounter wind noise in some installations. It is recommended to use an enclosed chase with a chimney pot to help reduce noise. There will always be some noise from the flue systems of all fireplaces.

INSTALLATION ORDER OF OPERATIONS

Prior to Construction and Installation:

1. Consult a licenced certified gas fitter for correct gas installation.
2. Install to current standards.
3. Install to manufacture's specifications.
4. All New Installations require a permit.
5. Allow for gas supply to heat cell at R.H. rear, and power supply to L.H. rear if required (check product).
6. For special requirements concerning materials (timber mantle and surrounds) within close proximity of Warmington products, please contact your local Warmington Authorised Retailer.

Stage 1: Frame Construction Procedure by Builder.

1. Mark out flue centre.
2. Mark out heat cell clearance requirements.
3. Build timber framing to heat cell clearances and chimney chase clearance requirements.
4. Ensure that the front face of heat cell clearance alcove is left open and unframed to enable installation of the firebox. The chimney chase is left unlined for installation of the flue.
5. Construct plinth only, to required height.*

Stage 2: Install Procedure by Registered Installer only.

1. Fit fire to plinth. (ensure gas supply line is fed through R.H. side of firebox.)
2. Fit flue system.
3. Fit cowl and flashing system.
4. Fit vents to heat cell alcove and chimney chase, to cool the heat cell and ensure efficiency of CAITEC Technology.
5. Clean and touch paint up on the fires and cover if necessary.

Stage 3: Finishing Procedure by Builder.

1. Construct hearth to required thickness.*
2. Finish framing of heat cell alcove.
3. Close in heat cell alcove and chimney chase.
4. Finish heat cell alcove and hearth to customer's requirements (e.g. paint / tiles).

* Note: Certified Installer can Install Hearth and Plinth.


Stage 4: Maintenance.

1. Visually Inspect Fireplace and Flue System.
2. Ensure that Firebox is operated according to the Manufacture's Instructions.


Important Notes: Custom built to clients requirements and current and relevant standards.

ZERO CLEARANCE FIREBOX DIMENSION

Minimum Flue Height	
Flue height	3600
measured from top of firebox	B + 3600

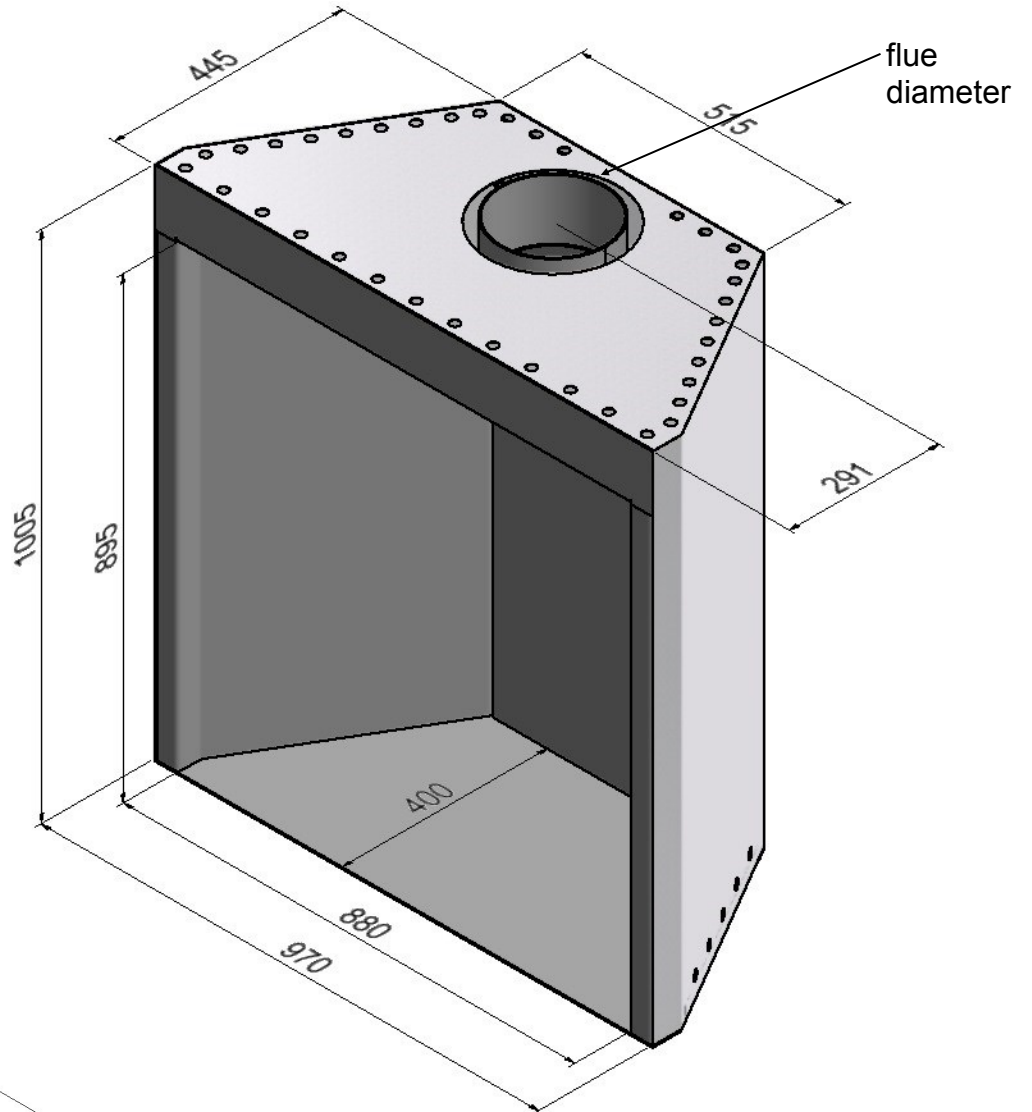


burner dimensions:
To fit existing register

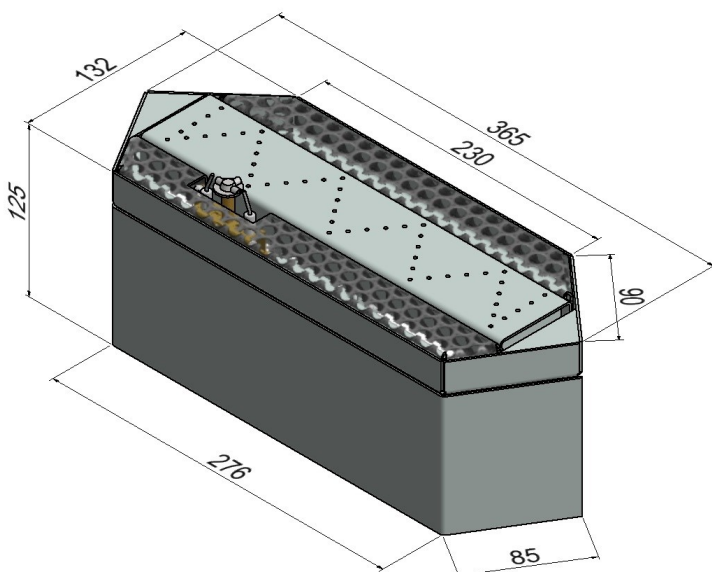

FLUE DIMENSIONS		Option A	Option B
Gas cowl	1	200	250
Flue diameter	3	200	250
Liner diameter	3	250	300
Spacer	3	200/250	250/300
Bottom spacer	1	200/250	250/300


Note:
DO NOT FRAME OUT TO THESE DIMENSIONS - CHECK HEAT CELL ALCOVE

NOTE: the damper plate in the register is to be removed, so there will be clear way for the exhaust. See relevant gas standards for compliance.

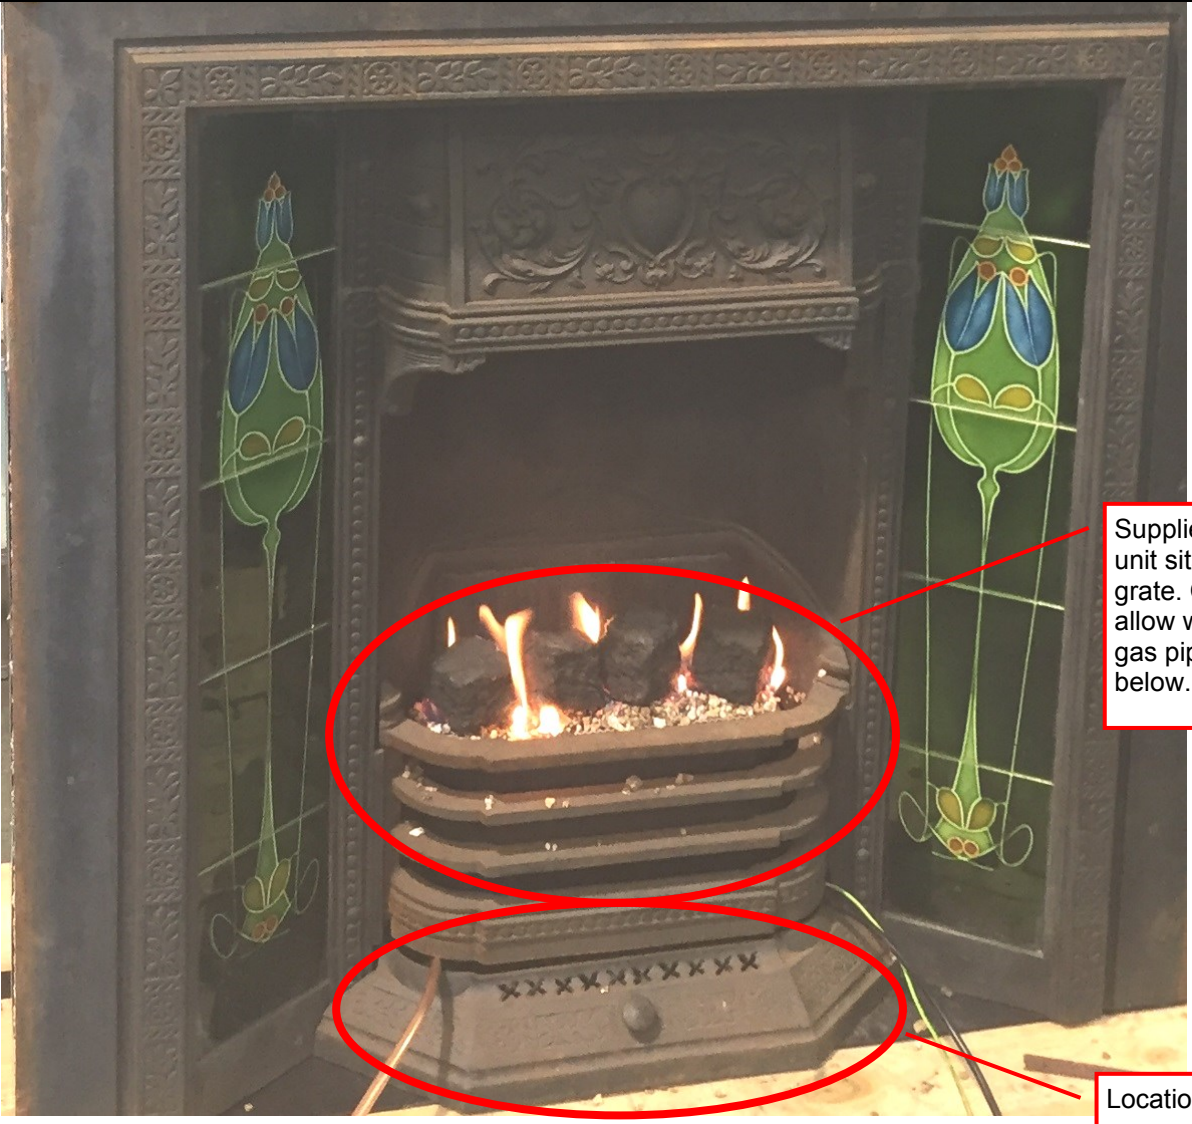


Supplied burner unit sits on existing grate. Cut grate to allow wires and gas piped to be fed below.


Location of control gear and gas valve. Valve located under raised grate.

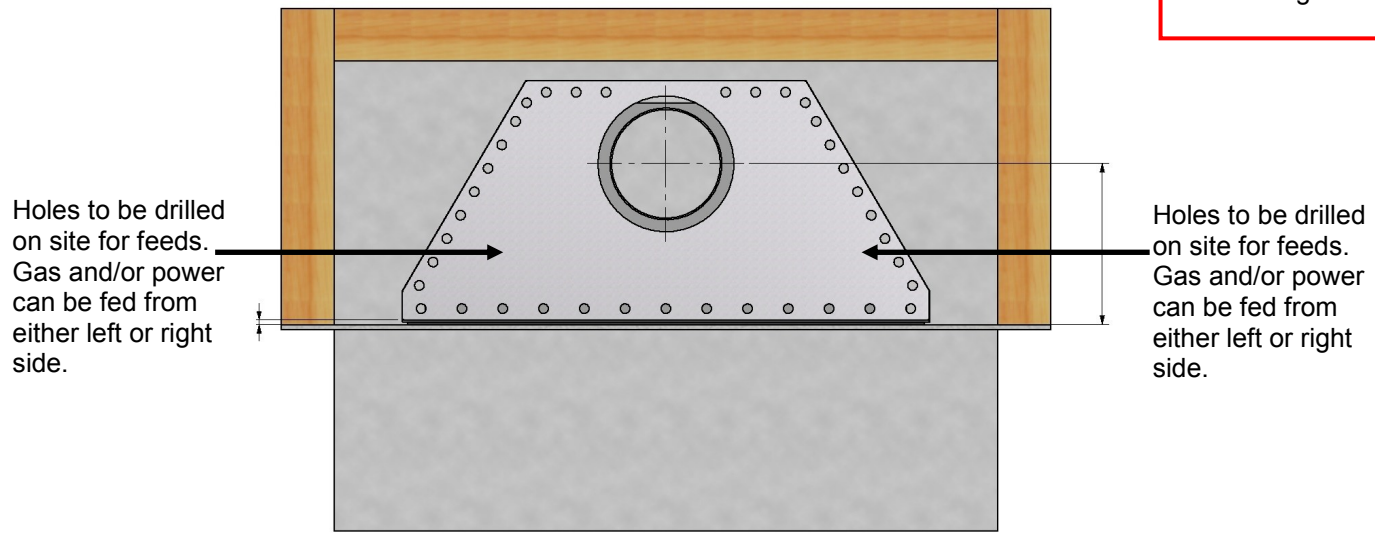


CONCRETE FLOOR

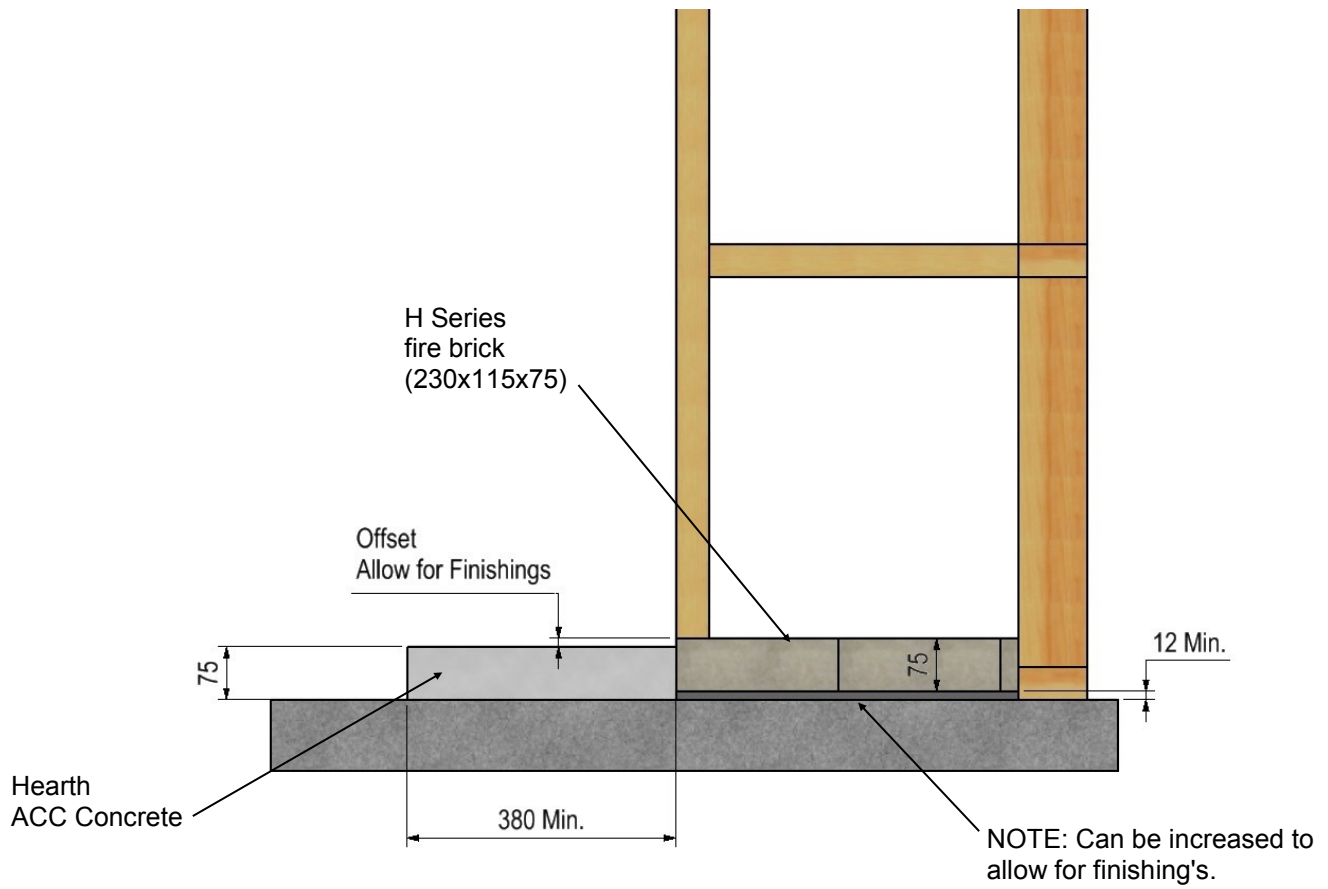

TIMBER FLOOR

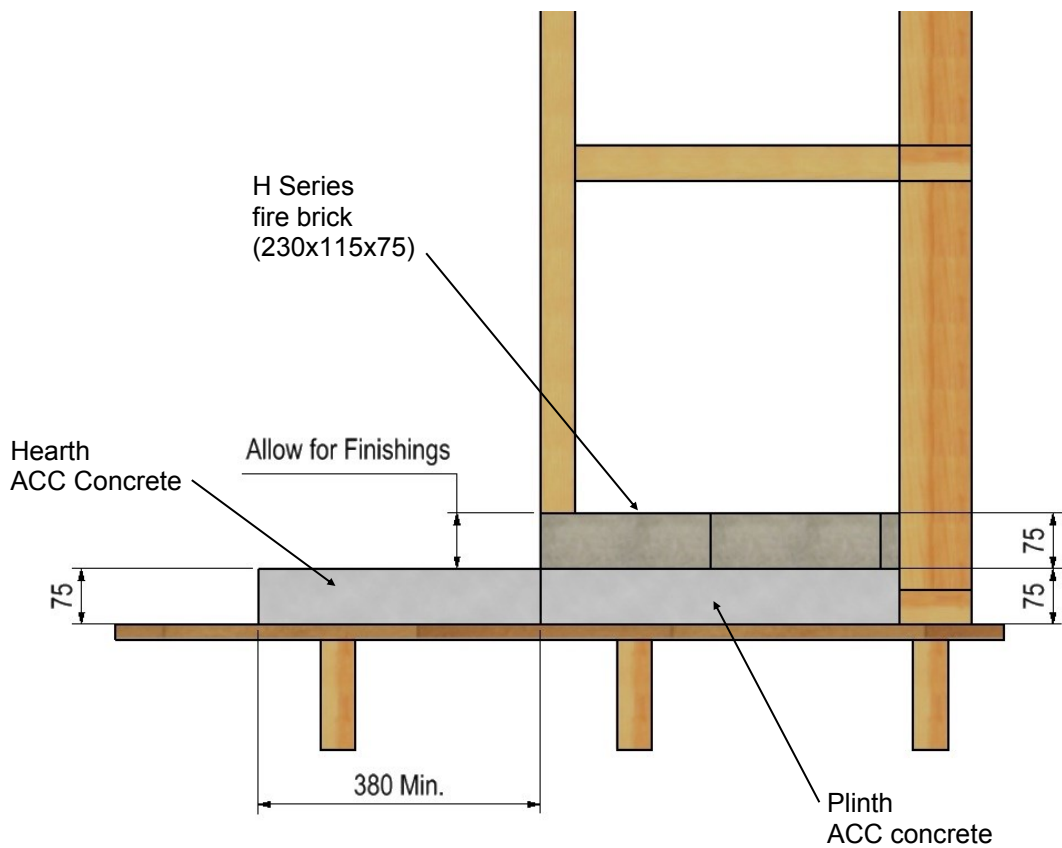


TIMBER FRAMING

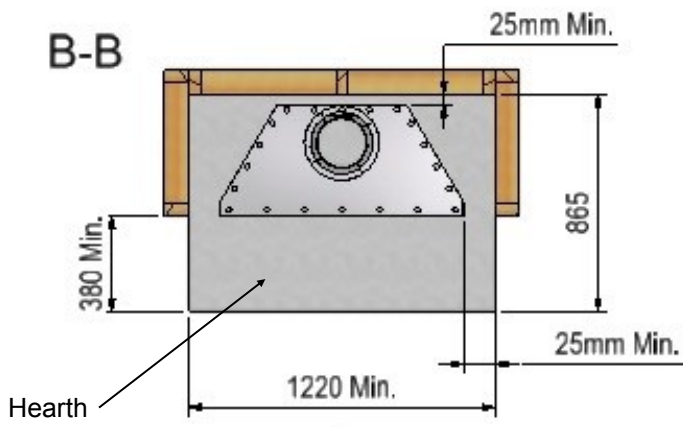


Note:
All framing dimensions are internal only

Note:
Centre line of flue is 'NOT' in centre of alcove

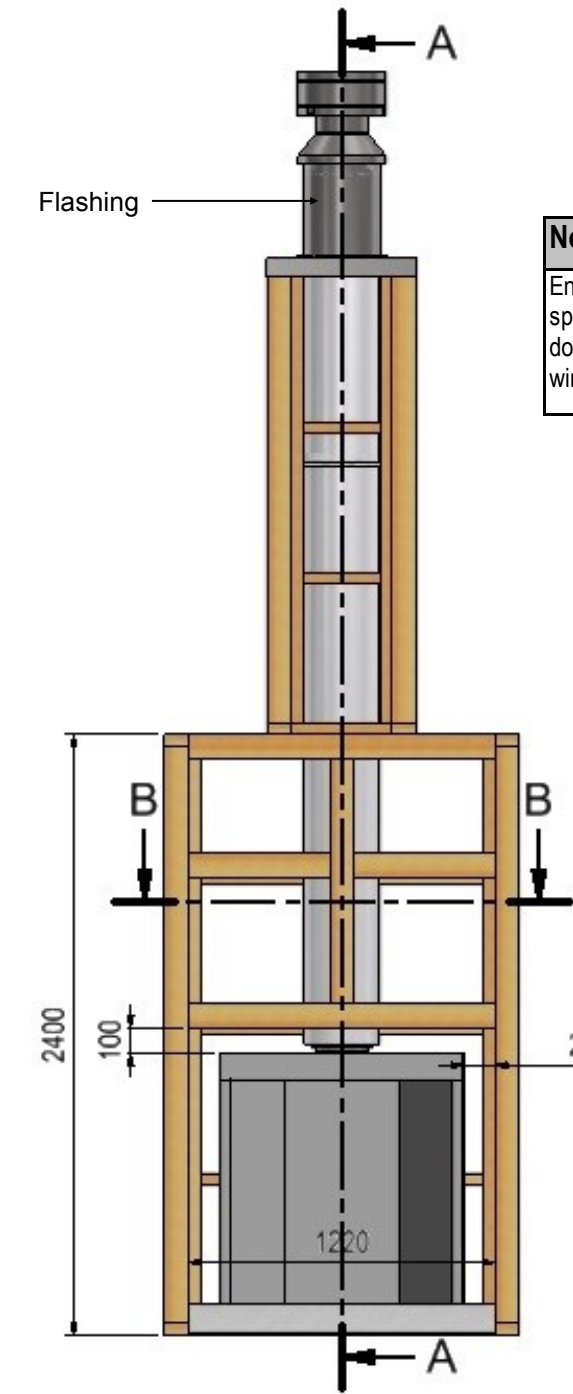


Note:
Ensure that the cavity has space and arrangements done for gas and electronic wires to be fed to the firebox.

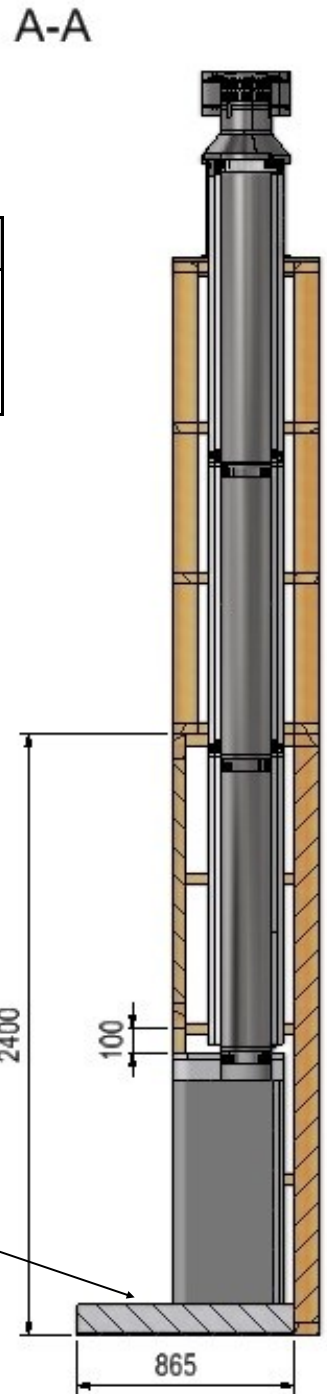



Refer to page 4 for floor installation details

GENERAL FITMENT OF VICTORIAN REGISTER

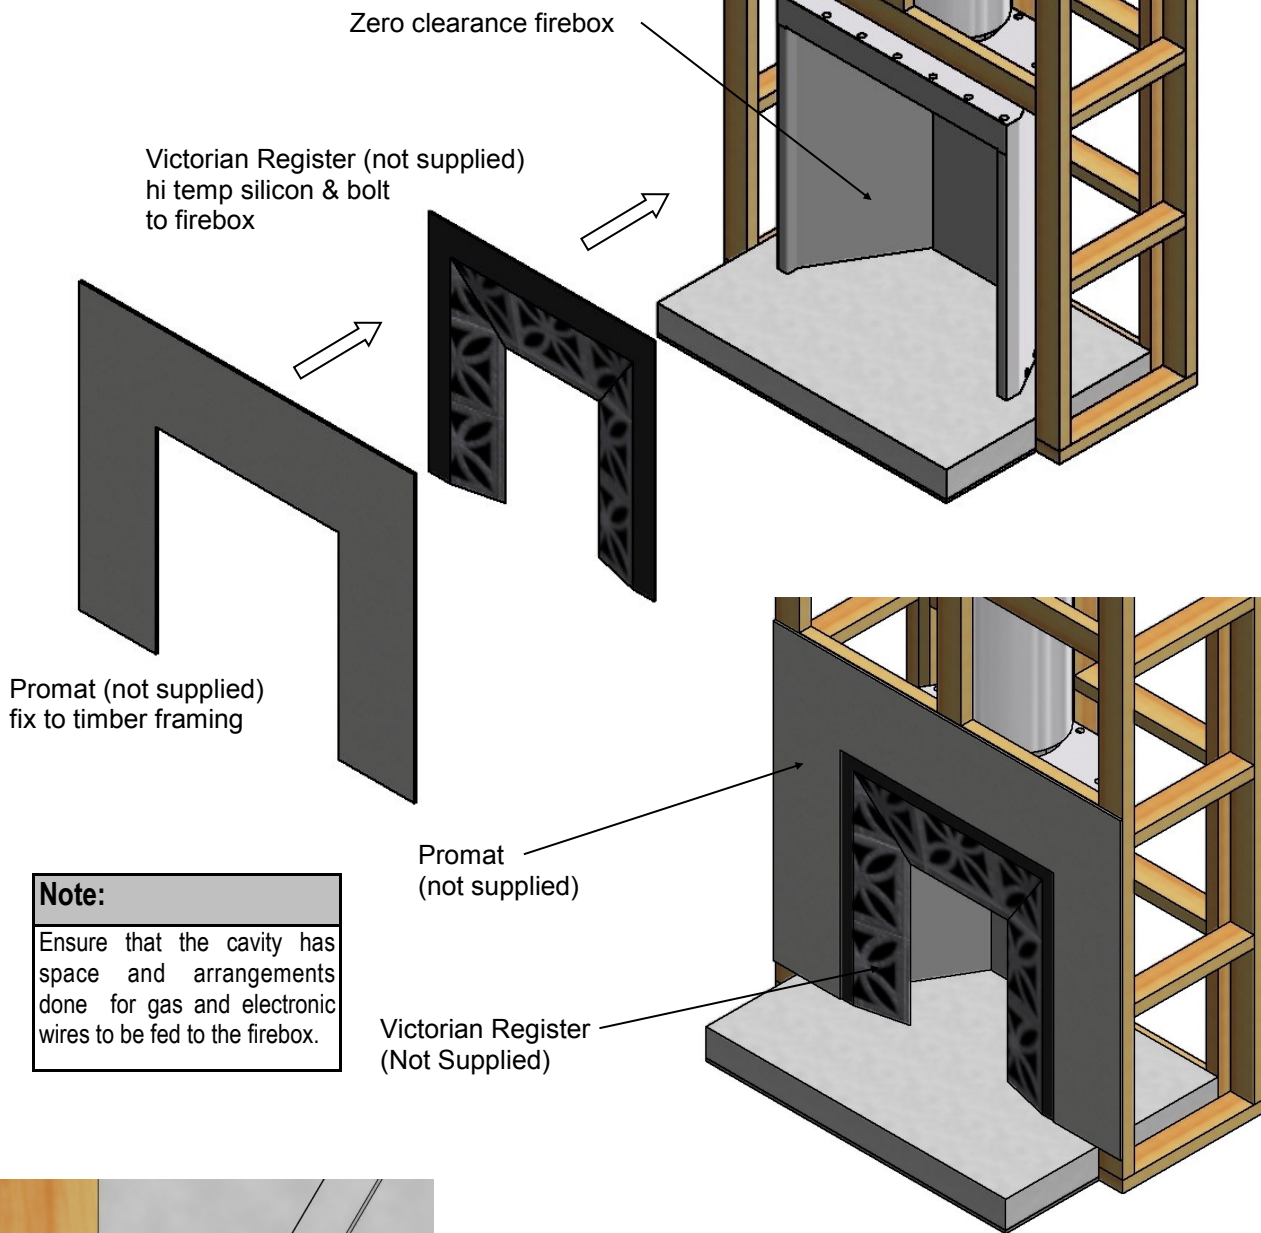

Note:

Ensure that the cavity has space and arrangements done for gas and electronic wires to be fed to the firebox.

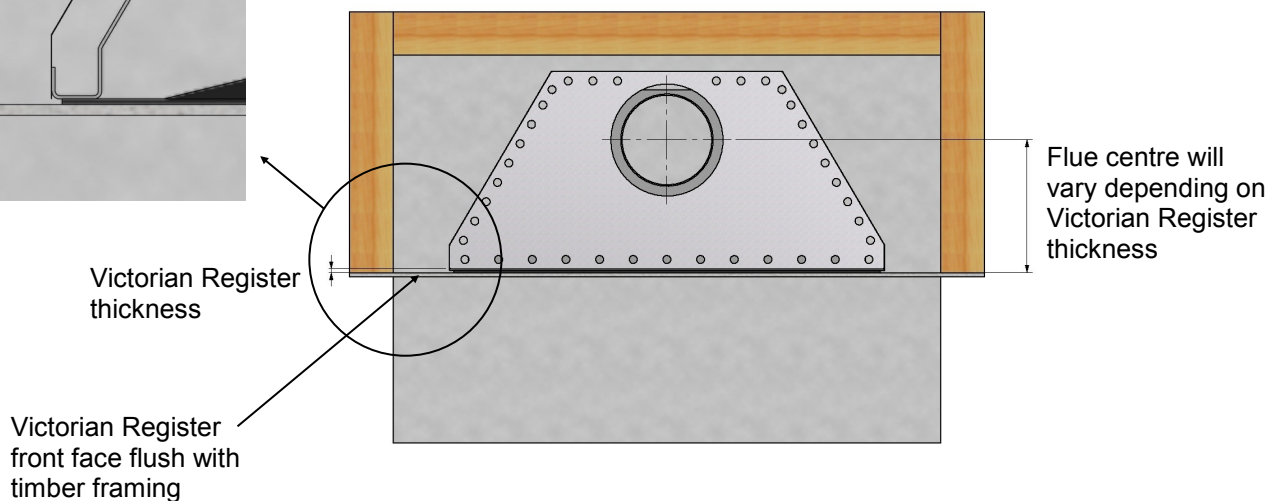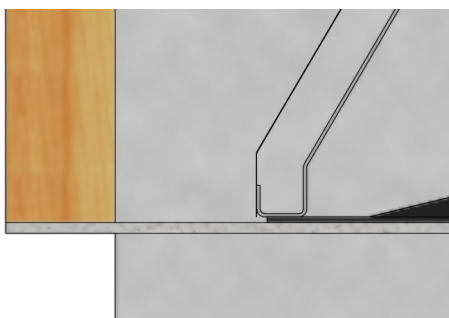

FLUE DETAILS DIMENSIONS

FLUE DIMENSIONS		Zero Register 200 Ø	Zero Register 250 Ø
Gas cowl	1	200	250
Flue diameter	3	200	250
Liner diameter	3	250	300
Spacer	3	200/250	250/300
Bottom spacer	1	200/250	250/300

Minimum flue height	
Flue height	3600
Measured from top of adaptor	B + 3600

NOTE:
Ensure that a Standard Tested Warmington Flue System is used on Warmington Fires.

FLUE SYSTEM INSTALLATION GUIDE


This is a general installation guide only – Contact a “NZHHA Installer” or Gasfitter for installation advice.

1. Install the first length of flue pipe with the crimped end down, inside the Adaptor collar, ensure that the flue pipe is sealed into the collar with exhaust sealant. Rivet the flue in 3 places around the adaptor collar. Place a bottom spacer around the flue pipe approximately 150mm above the adaptor collar. Secure in position by tightening the screw and nut.
2. Install the second length of flue pipe with the crimped end down and fit by riveting in at least 3 places around the flue pipe joint. Ensure that the flue is sealed into position with sealant.
3. Install the first section of flue pipe liner with the Crimped end up, over the flue pipe and over the spacer that is fixed to the flue pipe. This spacer will keep the liner concentric about the flue pipe.
4. Position flue spacer at the flue pipe joint for every length of “Flue pipe” and “Liner”. Repeat the Steps from 1 – 4 to the installed required height of the flue system. The flue system is to comply with the current standards.


- a “the flue pipe shall extend not less than 4.6m above the top of the floor protector.”
- b “ the minimum height of the flue system within 3 m distance from the highest point of the roof shall be 600mm above that point.”
- c “the minimum height of the flue system further than 3 m from the highest point of the roof shall be 1000mm above the roof penetration.”
- d “no part of any building lies in or above a circular area described by a horizontal radius of 3 m about the flue system exit.”

IF FLASHING CONE IS NEEDED:


1. **NOTE:** The last length of flue pipe needs to extend past the liner so that when the “top spider” and the “Flashing cone” are fitted, that the “flashing cone” and the “flue pipe” are **flush**, or that the “flue pipe” is **5mm lower** than the “Flashing cone”.
2. Fit the “Top Spider” into position, ensure that the legs of the spider are fitted inside the liner and that the spider is positioned hard down onto the liner and tighten with the screw and nut.
3. Place the “Flashing cone” over the “flue pipe” and press hard down onto the “Top Spider”. (Note that the “Flue pipe” and the “Flashing Cone” are either flush or the “Flue pipe” is 5mm Lower than the “Flashing cone”.) Ensure that the “Flashing cone” is clear for the venting from the “Liner” and the “flue pipe”.
4. Fit the “Cowl” to the top of the flue pipe. The “Cowl”, “Flashing cone”, and the “Flue pipe” can be secured to each other with the uses of a stainless steel self tapping screw. This will allow the “Cowl” to be removed for cleaning.
5. Flue system may require Bird Proofing due to the installation and locations, discuss this with your installer for the best advice.
6. If the Flue system is installed into a “Chimney Chase”, allow for air vent as close to the top of the chase as practical, or allow venting through the “Chimney Chase Flashing”. A “Venting Flashing cone” and a 25mm gap around the Liner with a “Venting Flashing Cone-Spider” can be used.

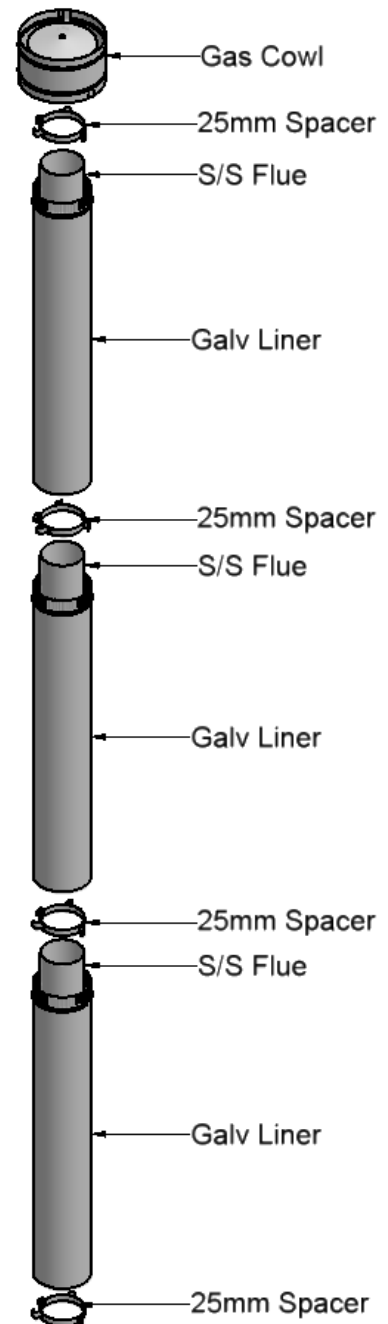


**FLUE PENETRATION - vented through alcove
(single lined flue system)**

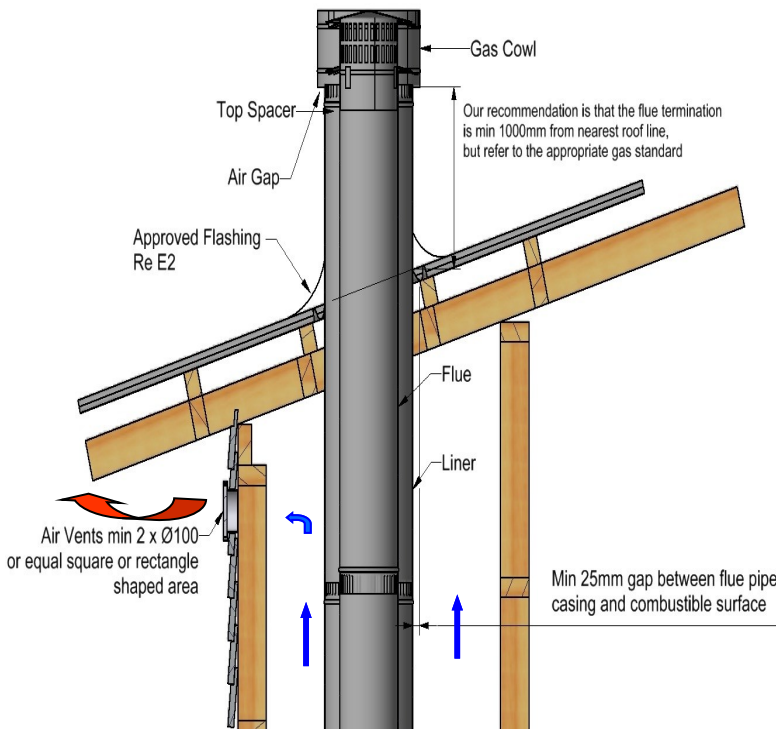

**FLUE PENETRATION - vented through alcove
(double lined flue system)**

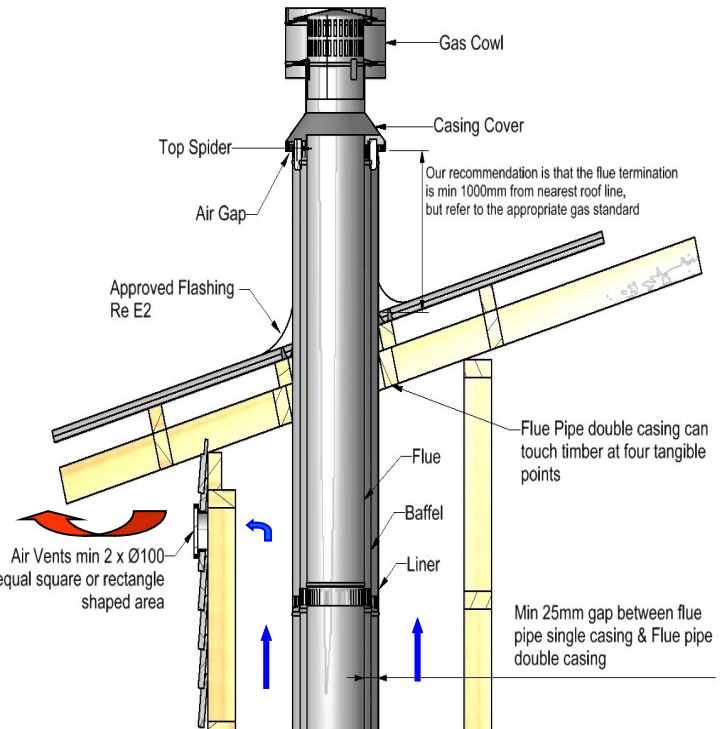

FLUE PENETRATION vented through top flashing

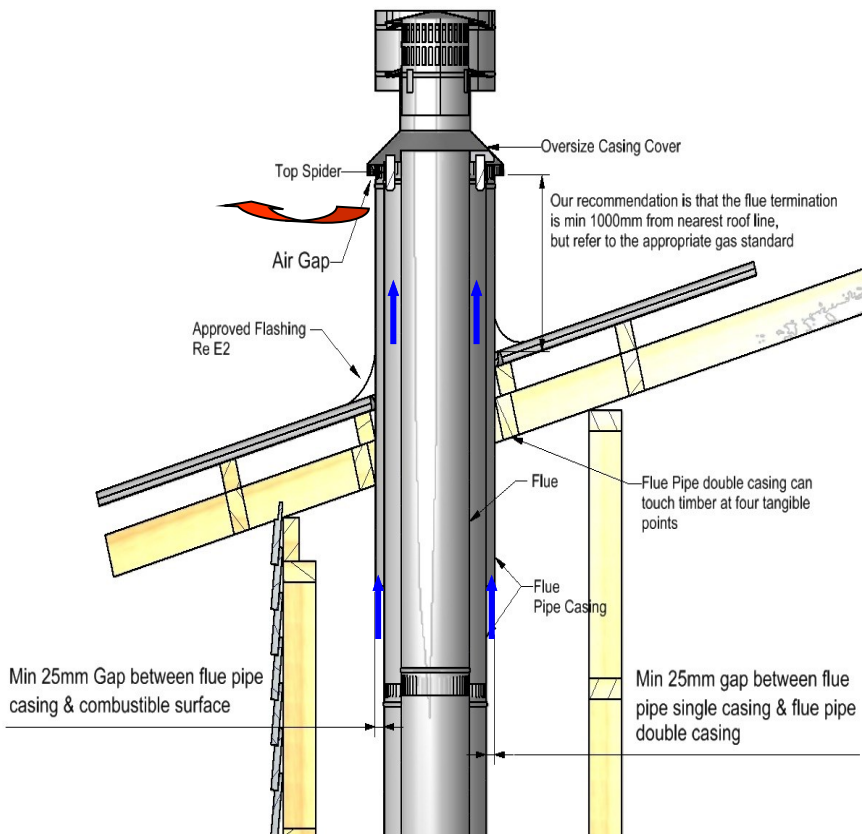

Note :

External requirements refer to relevant standards.

Install flue system to relevant standards.

When using a rubber or Bitumen flashing (Butynol, dectite) an additional flue pipe baffle is required.

All external air vents & ceiling penetrations must be bird proofed with permanently fixed screens.


All flashing to comply with E2.

All external air vents and ceiling penetrations are to be vermin and rodent proof.

Test Report Number	Date of Report
04/1039	20 th July 2004
04/1040	20 th July 2004
04/1041	20 th July 2004

CHIMNEY CHASE FLASHING DETAILS SETTING ADD GAS COWL HEIGHT

General Chimney Chase Flashing Lay Out

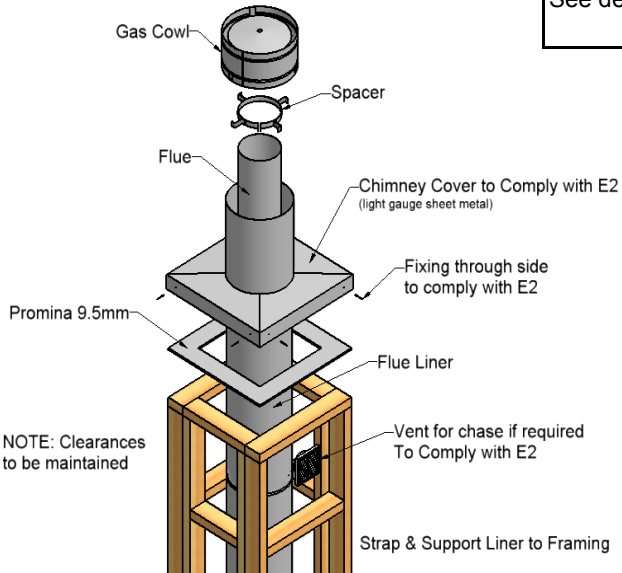


Note:
Flashing spigot height is determined by the Insulation that is fitted under the flashing.
See details at bottom of page.

SETTING COWL to FLUE
ADD gas cowl is to be set as shown and is in accordance with Foley Industries Ltd.


STEP 1

Flues are to be set flush to the same height, Spacer set at approx 80mm low.

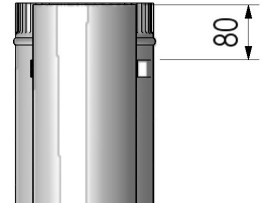



STEP 2

ADD Gas Cowl slides inside the flue, sitting on the swage, leaving a 10mm Air gap from cowl to liner, screw to secure

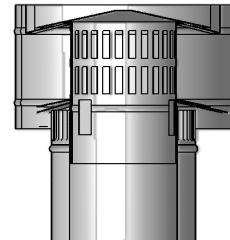

“CHIMNEY CHASE FLASHING” AND “AIR VENTILATION” OPTIONS :



VENTING THROUGH CHIMNEY CHASE

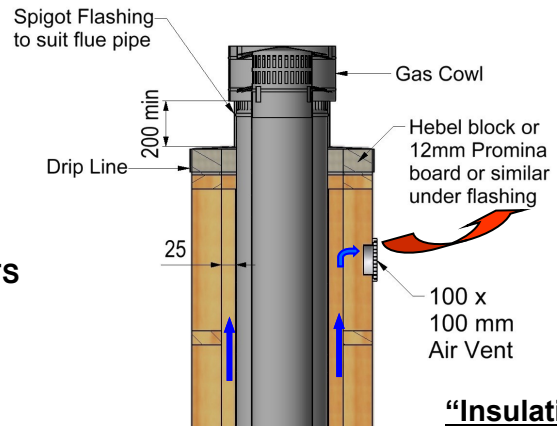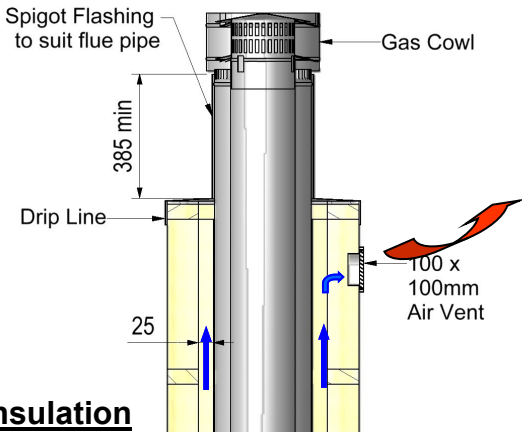

Note : 2 X 100MM VENTS in chase.

“No insulation under flashing”


VENTING THROUGH FLASHING

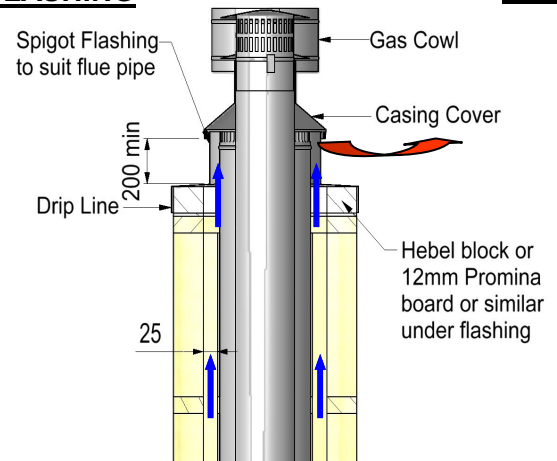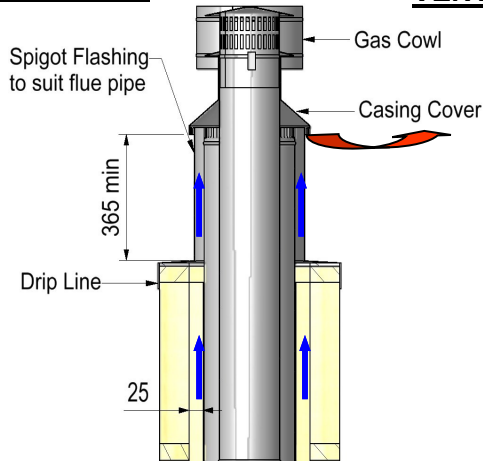

Note : 2 X 100MM VENTS in chase.


“Insulation under flashing”

FLUE HEIGHT MINIMUM DETAILS

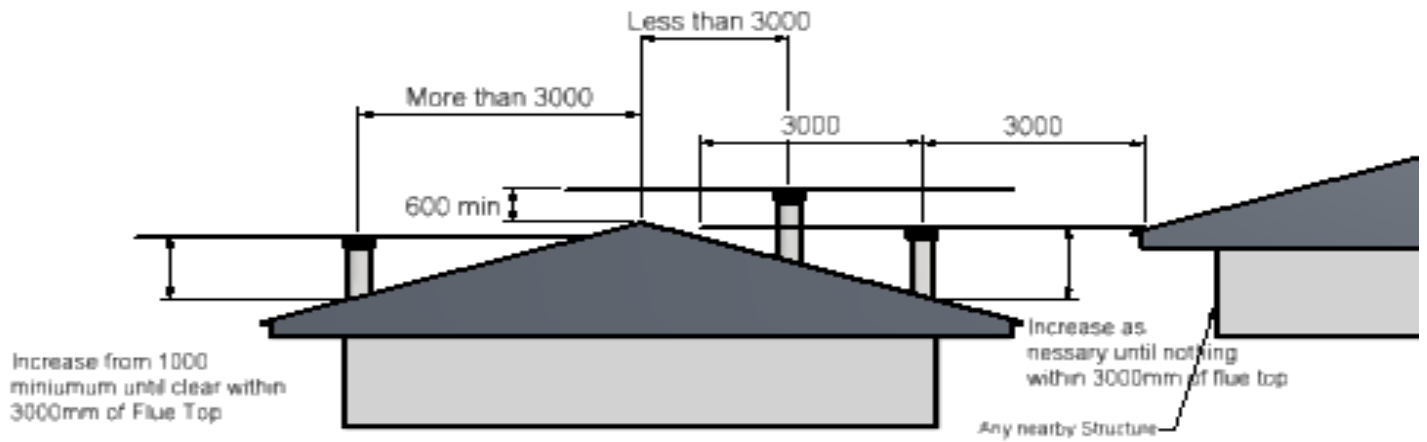

The Flue exit is to comply to relevant standards.


3D View

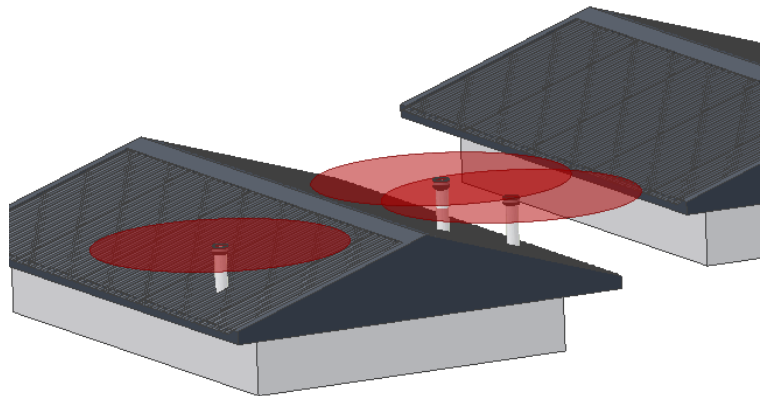



FRAME OUT AND TRIM OUT DETAILS FOR CHIMNEY CHASE

Option X – Singled Lined Flue System


Option Y – Double Lined Flue System

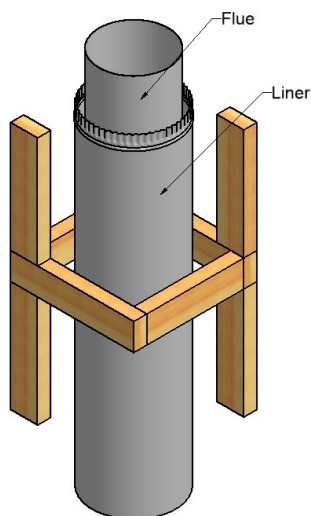



X = Liner Diameter + 50 mm

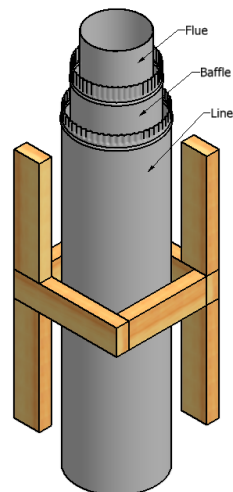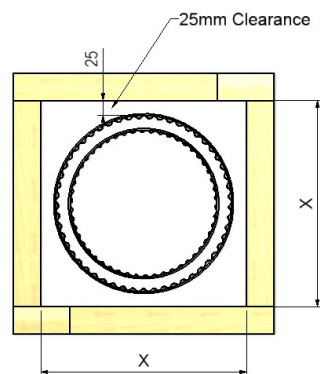


Y = Liner Diameter

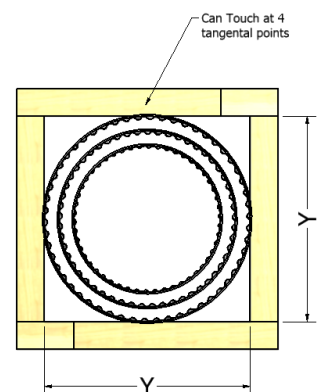

COMBUSTIBLE MANTLE CLEARANCES

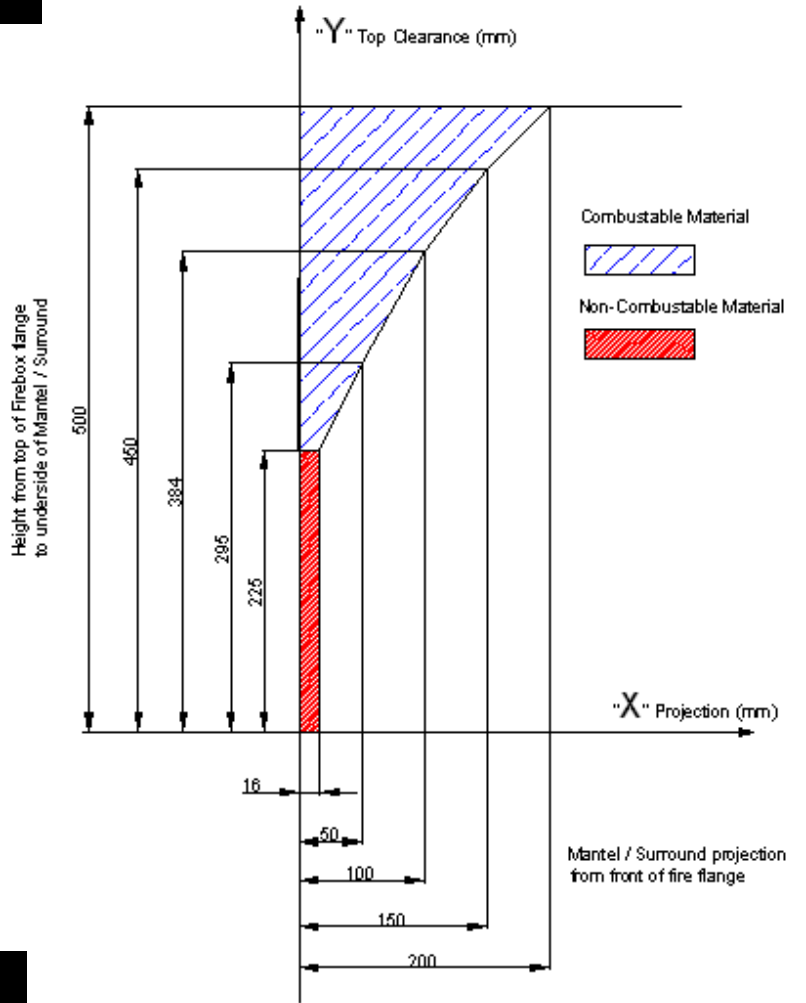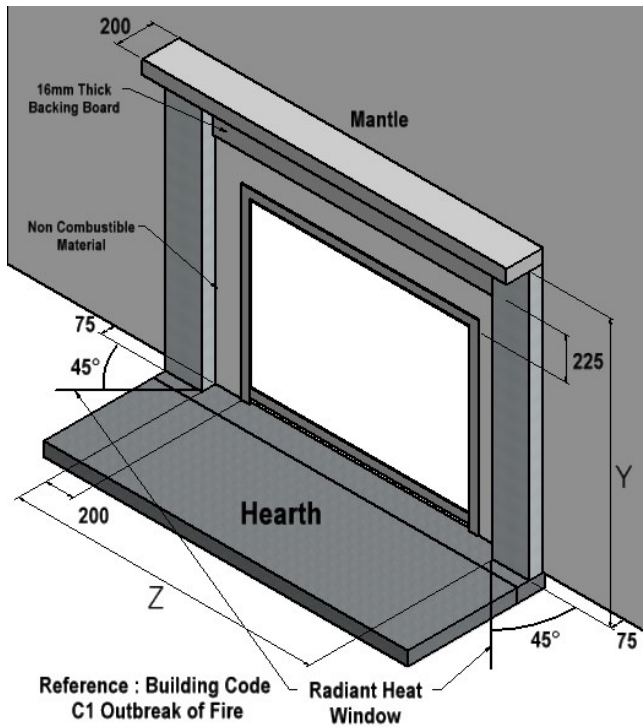



RAISED HEARTH CLEARANCES

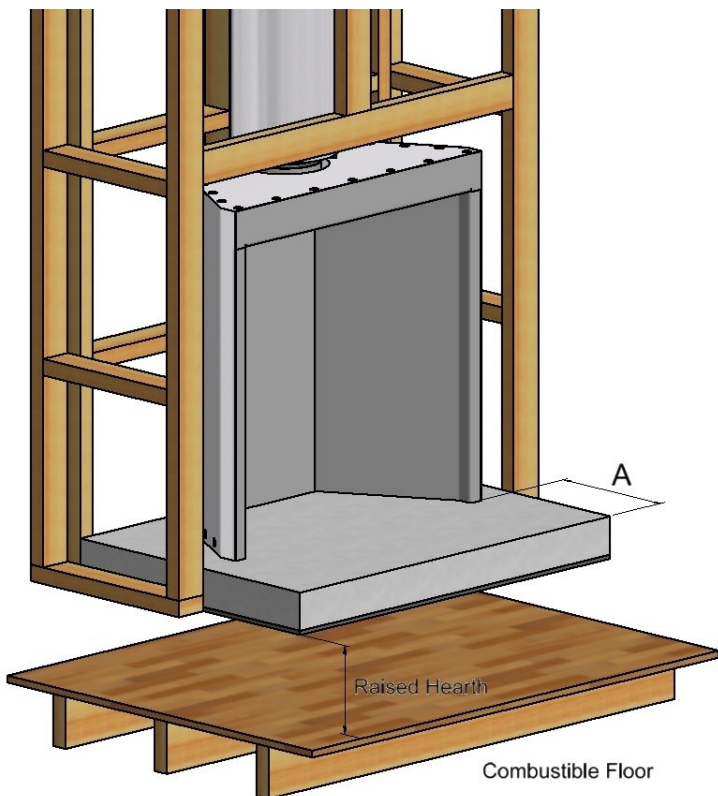

Note: For Combustible Floors
Minimum Hearth of 380mm (A) must be maintained at any given height.

VERMICULITE (COARSE) (To be set by Gasfitter)

General coal orientation for optimum effect.

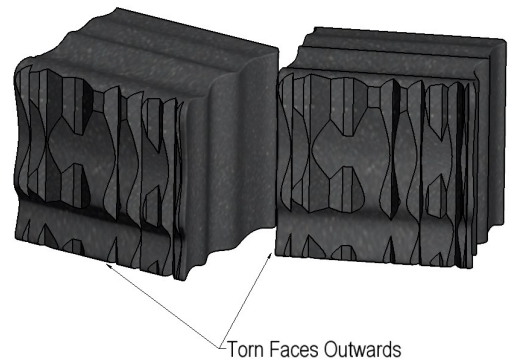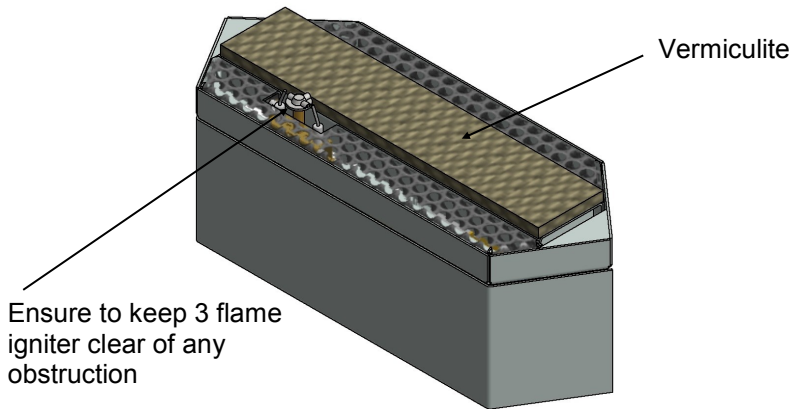

APPLYING THE VERMICULITE: (Coarse grade - must be larger than the burner plates holes so as not to block them)

Apply with care a thin layer of Vermiculite over the burner, just enough to cover the burner tray only.

NOTE: If the burner flame is uneven, the Vermiculite may need to be changed or sifted to remove the smaller pieces that can block the burners holes. The smaller pieces can cause uneven burn and the unit to run dirty.

COALS AND LOGS (To be set by Gasfitter)

Gloves should be worn when handling ceramic fibre coals & logs: Care needs to be taken when handling coals & logs, due to the carbon on the coals can stain the surroundings.

HELPFUL HINTS: When hot use metal tongs.

Apply a thin layer of vermiculite over the burner, just enough to cover the burner tray only as shown above.

Each coal should be randomly positioned with the torn (roughest) facing outward. **Ensure coal positioning does not directly block the 3-flame pilot.**


The placement of the coals & logs may vary to make an even flame pattern.

Note:
Check dimensions of burner on page 3 to ensure burner fits existing register

Number of Coals	4
-----------------	---

LPG	
Nominal Pressure (kPa)	2.75
Nominal Injector Size (mm)	1x1.0 mm
Burner Pressure High (kPa)	1.50
Burner Pressure Low (kPa)	1.00
MJ/h	9.5
Flame Effect Output Only	Effect
Supply Pipe Size dia—min	3/8"
Natural Gas	
Nominal Pressure kPa	1.50
Nominal Injector Size mm	Tbc
Burner Pressure High kPa	Tbc
Burner Pressure Low kPa	Tbc
MJ/h	Tbc
Flame Effect Output Only	Effect
Supply Pipe Size dia—min	3/8"

Lab. Test No	AP0049
Lab. Test Dates	14/10/2015
Approved Practitioner Declaration No	WAR100

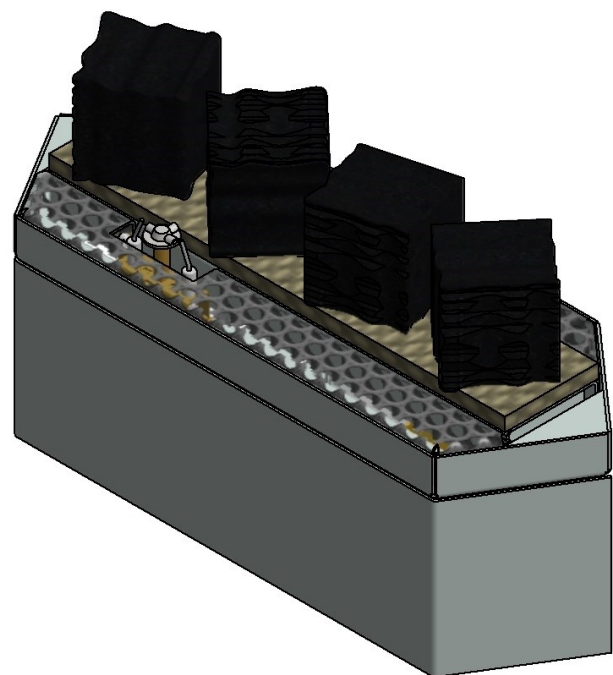

SG / EG Range: Gas Convection Fireplaces

TO THE INSTALLER / GAS FITTER and ELECTRICIAN

NOTES:

- Service annually or more if required.
- Custom built to clients requirements and to relevant and current standards.
- The appliance and flue system must be installed in accordance with the relevant and current standards and the appropriate building codes.

FLUED GAS APPLIANCES: All gas fires requiring Warmington flue systems shall be installed to the requirements of the current standards and shall be appropriately designed and constructed to permit safe and effective use. This Appliance must be flued to the outside atmosphere. All Warmington Fires must be Installed with a minimum of 3.6m of Approved **Warmington Gas Flue and Liners** .

GAS TYPE: All gas fires shall operate safely on the gas type specified on the appliance and shall comply with the requirements of The Gas Act.

APPLIANCE SAFETY: Any gas fire appliance shall comply with the safety requirements of the current standards listed under "Related documents" in this specification.

ELECTRICAL REQUIREMENTS: All gas fire appliances installed with mains supplied electrical components for associated use with these appliances, must comply with The Current Electricity Regulations.

ELECTRONIC CONTROL SYSTEMS: Any gas fire appliance installed with manual or programmable electronic control system shall be tested and/or approved by a Recognised Person or Authority.

SEISMIC RESTRAINTS: All fires used for domestic and commercial purposes shall be firmly secured (unless defined as portable or mobile) to prevent dislodgement from their point of fixture or Installation during seismic activity. Such restraint must be of a reasonable expectation .

GAS CONNECTION: A Gas Certificate must be obtained for the installation and commissioning of this appliance and flue system .

Check that the Gas type specified on the Data Plate is correct for the available supply (LPG or NG).

A copper gas supply capable of supplying the correct MJ/h should be brought into the rear of the installation cavity, through the hole. provided . A Flare nut is provided on the burner for gas connection to the appliance.

COMMISSIONING AND TESTING OF FIREPLACE (To be carried out by Gasfitter)

Read all the instructions before commissioning. Install coals and logs and burner before commissioning.

Light appliance and check HIGH/LOW settings. Check operation of appliance and adjust to suit.

Adjust control valve setting if required. After a period of running (30min Plus) check the setting of the pilot and adjust if required. See Spec's for details.


Extinguish appliance, remove test equipment and secure test nipple. Check for gas leaks.

Note: The Control Valves are factory set and should not require adjustment.

GAS FITTER TO CARRY OUT STANDARD TESTING FOR COMMISSION:


- Spill test taken at top of opening with smoke or smoke match.
- Leak testing appliance and joints.
- Correct operation of the burner and coal and log lay out.
- Test gas pressures high and low, drop test on supply line.
- 5 second light time across burner. Other testing that may be required.
- Ventilation requirements to the standards.
- Clean and or touch up paint of fire box and burner.
- Hand over to client, tests and comply to relevant standards.

VIEW OF GENERAL COMPONENTS

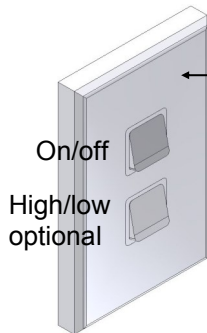

The main isolating switch


1. Single on/off switch needed for standard units.
2. Double switch with on/off and high/low, is needed for hi/low units.

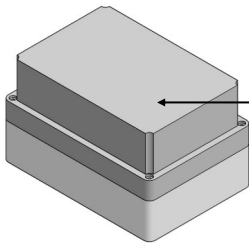

The Main Control box

(Ensure that the box is accessible)

NOTE: Control box must be in a moisture free environment because of electronics

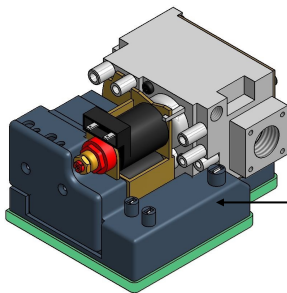

1. **SIT 840 (on/off only) Control Valve**
2. **SIT 843 (hi/low) Control Valve**

TESTING BURNER

Once the unit is installed: (to be tested by the electrician and the gasfitter for correct operation)

- Ensure that all gas connections are leak free.
- Ensure all components and electrical connections are completed and firmly secured.
- Ensure the unit is free of obstruction and any flammable material.
- Switch on main power switch (supplied by electrician).
- Depress the pulse switch (supplied by electrician).
- The high frequency spark electrode will operate. At the same time, the gas solenoid valve will open allowing the gas to flow to the burner. If the unit does not light it will automatically shut down (on flame failure).
- The Main power switch should be switched off when burner is not being used to ensure that there is no accidental operation of the unit.

OPERATION OF YOUR CUSTOM BURNER (WITH ELECTRONIC CONTROL)

Your burner must be installed and tested by a suitably qualified gas fitter or technician prior to use.

TO LIGHT

1. Ensure the unit is free of obstruction and any flammable material.
2. Switch on main power switch (supplied by electrician).
3. Depress the pulse switch (supplied by electrician).

The high frequency spark electrode will operate. At the same time the gas solenoid valve will open allowing the gas to flow to the burner. If the unit does not light it will automatically shut down (On flame failure/ safety feature).

TO SHUT DOWN

Switch the main power switch off to shut down the unit.

**Lighting your gas fire using electronic or remote ignition systems may vary as per manufacturer instructions*

IMPORTANT NOTE ABOUT YOUR DECORATIVE GAS FIRE

Warranty Cover will be considered void if failure to operate the appliance in accordance with the supplied Instructions and Specifications, or is the subject to damage or misuse beyond the expected conditions of normal use which could result in injury or property damage.

MAINTENANCE

**Lighting your gas fire using electronic or remove ignition systems may vary as per other manufacturers instructions.*

- Warmington Industries recommend annual servicing of your gas fire by an approved Gasfitter.
- All burner settings, coal placement, vermiculite cover is to be checked and set in accordance with this Specification by a Gasfitter or qualified service person.
- External surfaces should be dusted with a damp, lint-free cloth when the fire is cold.

POINTS OF SAFETY - To the customer /home-owner

Your Warmington gas fire operates on the principle of dual radiant and convected heat. Therefore it is important to observe the following precautions associated with any heating appliance or open fire:

- Do not cover or restrict the fireplace upper or lower vents in any way as this may result in a build-up of hazardous gases within the room.
- The fire is not intended for the drying of clothing, bedding etc.
- Avoid installing this appliance in high traffic areas, strong draughts or near drapes or furniture.
- The use of an approved fireguard is recommended for the protection of young children.
- Avoid using aerosols when the appliance is operating.
- Avoid anyone leaning against or lying directly in front of the fire while operating.
- Do not place anything objects into or against the gas fire at any stage.
- The fire may release a small amount of smoke on its first start up which may take 1 or 2 hours to dissipate. This is part of the curing process so ensure there is adequate ventilation within the room.
- Always use a registered Gas Fitter or Electrician for installing and maintenance work
- Always use certified gas cylinders that have been tested and are safe to use.
- Never modify your gas appliance or its settings from those specified by the manufacturer.

APPLIANCE SAFETY: Any gas fire appliance shall comply with the safety requirements of the current standards listed under "Related documents" in this specification.

ELECTRONIC CONTROL SYSTEMS Any gas fire appliance fitted with manual or programmable electronic control systems shall be tested and/or approved by a recognised person or authority.

SEISMIC RESTRAINTS All gas fires used for domestic and commercial purposes shall be firmly secured (unless defined as portable or mobile) to prevent dislodgement from their point of fixture or installation during seismic activity.

WHAT DO YOU DO IF YOU SMELL GAS?

- Open windows and doors.
- Do not light any gas appliance.
- Do not use any electrical appliance or switches.
- Do not use the telephone in your home.
- Leave the building; shut off the domestic gas supply valve (beside your meter).
- Call your gas supplier/gas fitter or the Fire Service for further advice.

FAULT FINDING**Pulse Switch depressed and no spark at the electrode:****CHECK:**

- Earth wire connected
- Main power is turned on
- Correct wiring to the wiring diagram (wiring to switches/electrodes)
- The gap between the electrode and pilot is approx. 3mm
- The ceramic insulator on the electrode is not cracked
- Electrode not coated by soot or dust
- Electrode not burnt out

Sparking but failure to light:**CHECK:**

- Gas supply to the unit is turned on
- Solenoid valve operating
- Electrically wiring to solenoid
- Correct jet for gas supply (LPG/NG)

Lights but goes out after a short time:**CHECK:**

- Flame rod is in the flame path
- Setting of the timer in the control box – contact your authorised retailer.


Flame burns well away from the burner:**CHECK:**

- The correct jet for the gas supply (LPG/NG)
- Check the gas pressure

Note:

- If unit is fitted with an LED, the LED will light up on a flame failure.
- The cycle from starting to ignition is approx. 30 seconds.

ON/OFF VALVE ONLY

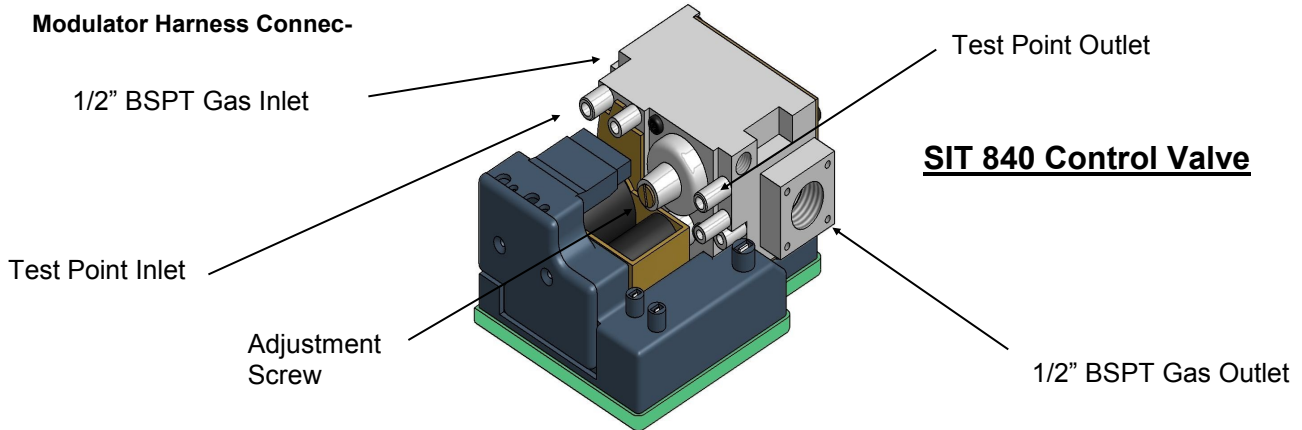

- After checking the pressure, turn the unit off, remove Manometer from the Test Point and Tighten the Test Point Screw. Ensure to check for gas leaks.
- Turn the Appliance On and Off a few times to check ignition.
- When you are satisfied that the Appliance is working correctly , fit the Front Panel Assembly back to the Gas Burner.
- NOTE : Ensure you peel the Protective Plastic Coating from any Stainless Steel components if fitted.
- All Burner Aerations are Factory Preset and cannot be adjusted.
- If you are unable to get the unit to operate correctly, refer to troubleshooting before contacting your Local Service Contact as listed.
- It may take approximately 2 hours of operation for the coals/Logs or river rocks to achieve their full flame pattern and glow.
- During the Initial Burning in period, some smoke and smell may be experienced , the appliance should be run in a well ventilated room until these dissipate .

ON/OFF HIGH/LOW VALVE ONLY

- Refer to data plate in this specification for settings. A data plate is also attached to the under carriage of the burner.
- Loosen the jet test point and attach manometer (digital is preferred).
- Ensure there is gas supply and power supply (caution 240V) to the unit
- Light Appliance, adjust to high flame setting and check pressure, adjust to low flame and check pressure.

NOTE: If setting the pressure is required it is to be carried out by a certified gasfitter.


- If adjustments are necessary, remove the cap. The pressure adjustment screw and nut are on the front side of the gas control valve (shown in diagram B in this specification) and are **factory set**.

High pressure setting: Set the burner to high with the switch. Screw in **nut A** to increase the outlet pressure then screw nut A out to decrease the pressure to the desired settings. Use 10mm spanner.

Low pressure setting: Set the burner to Low with the switch (see wiring diagram) and, keep nut A stationary. Use a screw-driver to screw in **screw B** to increase the pressure and screw out to decrease the pressure. Carefully replace the modulator plastic cap.

WARNING: To ensure the correct operation of the hi/low burner, it is necessary that the plastic cap is returned to its original location.

Hi/low harness connections

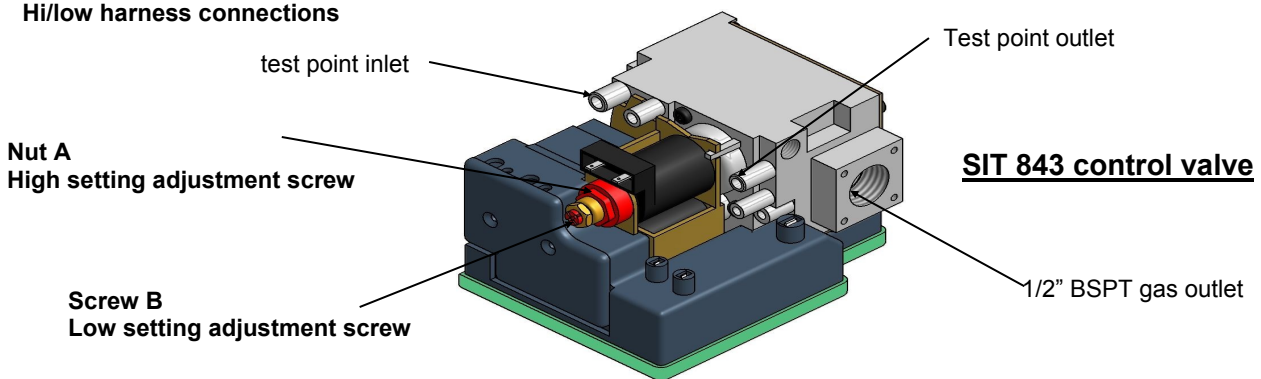

- After checking the pressure, turn the unit off, remove manometer from the test point and tighten the test point screw. Ensure to check for gas leaks.
- Ensure Power is off & reconnect modulator harness connection in the main harness. See diagram B Above.
- Turn the appliance on and off a few times to check ignition.
- When you are satisfied that the appliance is working correctly, fit the front panel assembly back to the gas burner.
- **NOTE:** Ensure you peel the protective plastic coating from any stainless steel components, if fitted.
- All burner aerations are factory preset and cannot be adjusted.
- If you are unable to get the unit to operate correctly, refer to troubleshooting before contacting your local service contact.
- It may take approximately 2 hours of operation for the coals/logs or river rocks to achieve their full flame pattern and glow.
- During the initial burning in period, some smoke and smell may be experienced, the appliance should be run on the high position in a well ventilated room until these dissipate.


ADJUSTMENT OF THE PILOT - 3 FLAME (adjustment by gasfitter only)

Note: When the base screw is removed, gas will leak from the out let, ensure that the pilot is not adjusted or the screw removed when the fire is burning.


- Adjustment of pilot - 3-flame: unscrew base screw as shown in diagram 2 below.
- Insert a screwdriver as shown in diagram 3 and adjust the adjustment screw up inside the 3-flame pilot to adjust the flame height.
- The flame must always be passing over the electrodes and/or file tube on either side.
- Replace the base screw and check for leaks.

Note to gasfitters


The 3 flame pilot may need adjustment after a period of running time on set up as the increase in heat in the fire will induce a higher draft in the fire, and may pull in flame away from the file tube causing the fire to shut down.

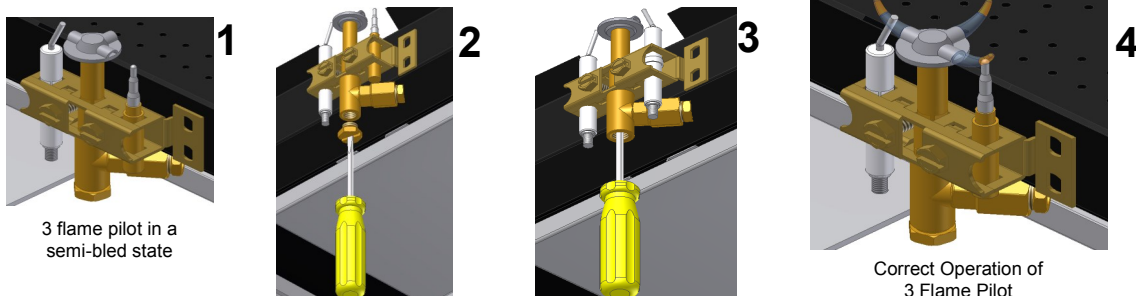

GAS BURNER AND ELECTRICAL CONTROL BOX LAYOUT

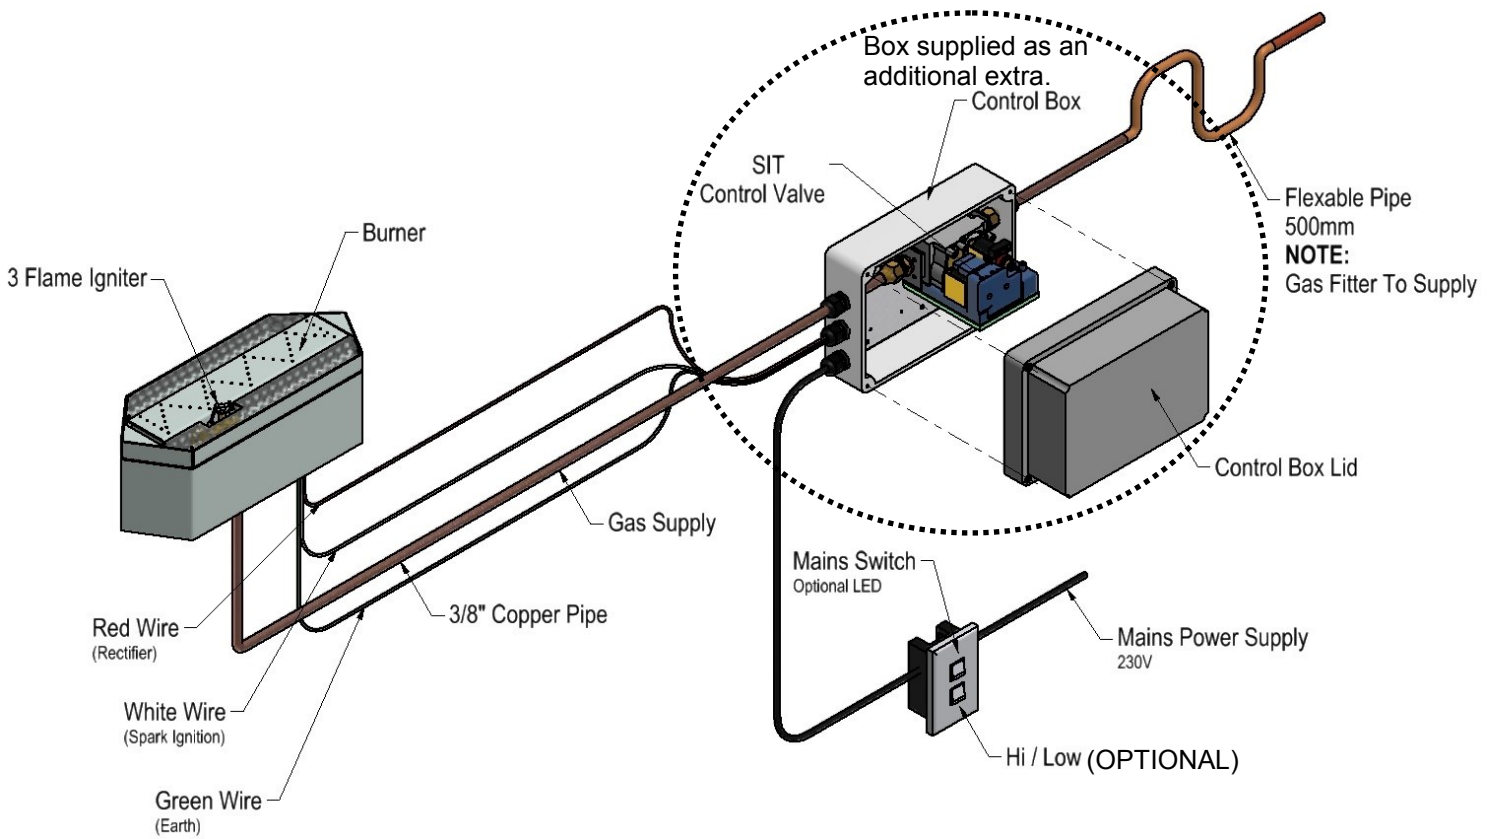


MAIN & HI / LOW SWITCH CONNECTION

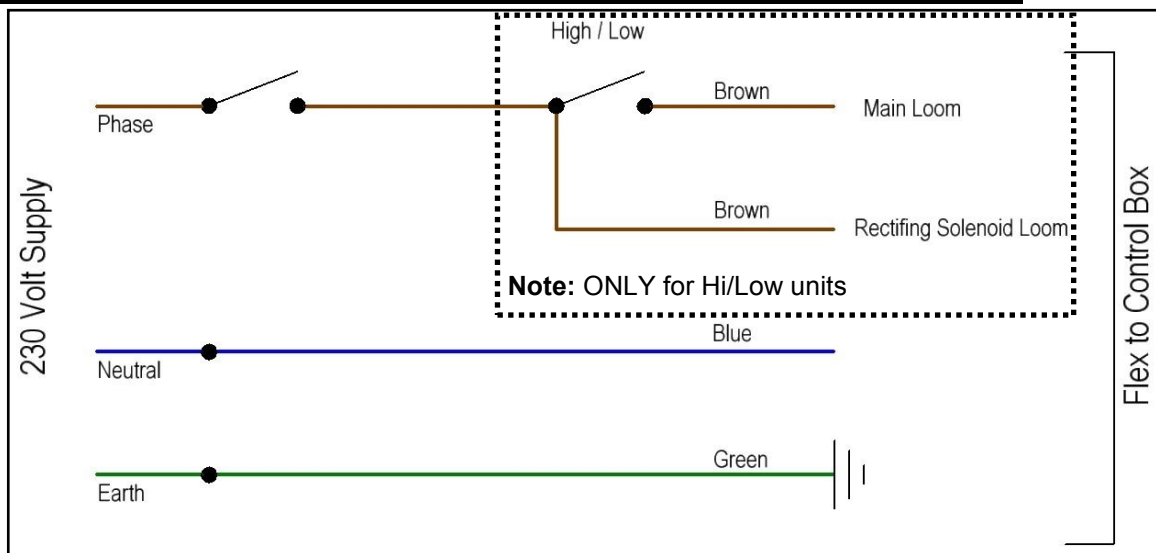


HT Leads
White Lead – spark
Red Lead - rectifier

GAS ON/OFF SCHEMATIC DIAGRAM

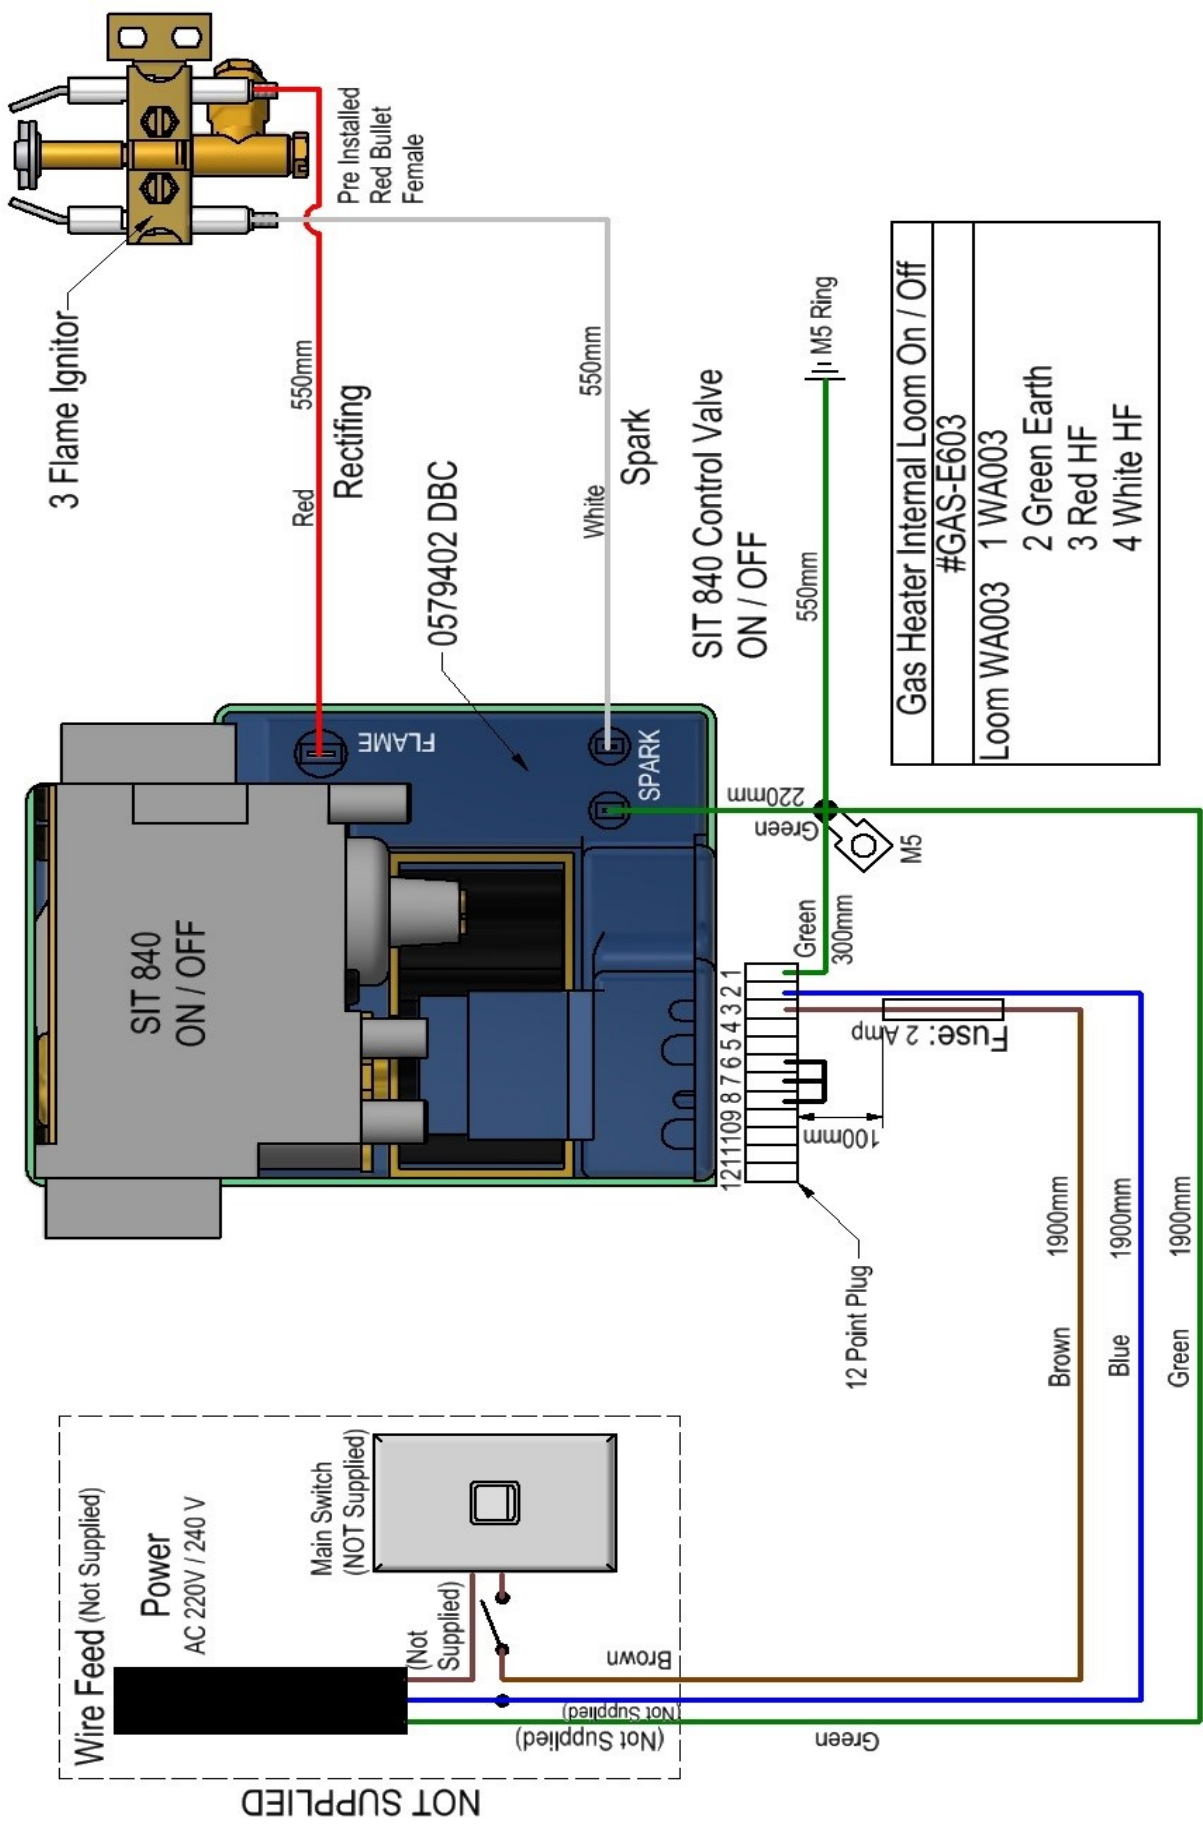

GAS STARTER ON/OFF HI/LOW SCHEMATIC DIAGRAM

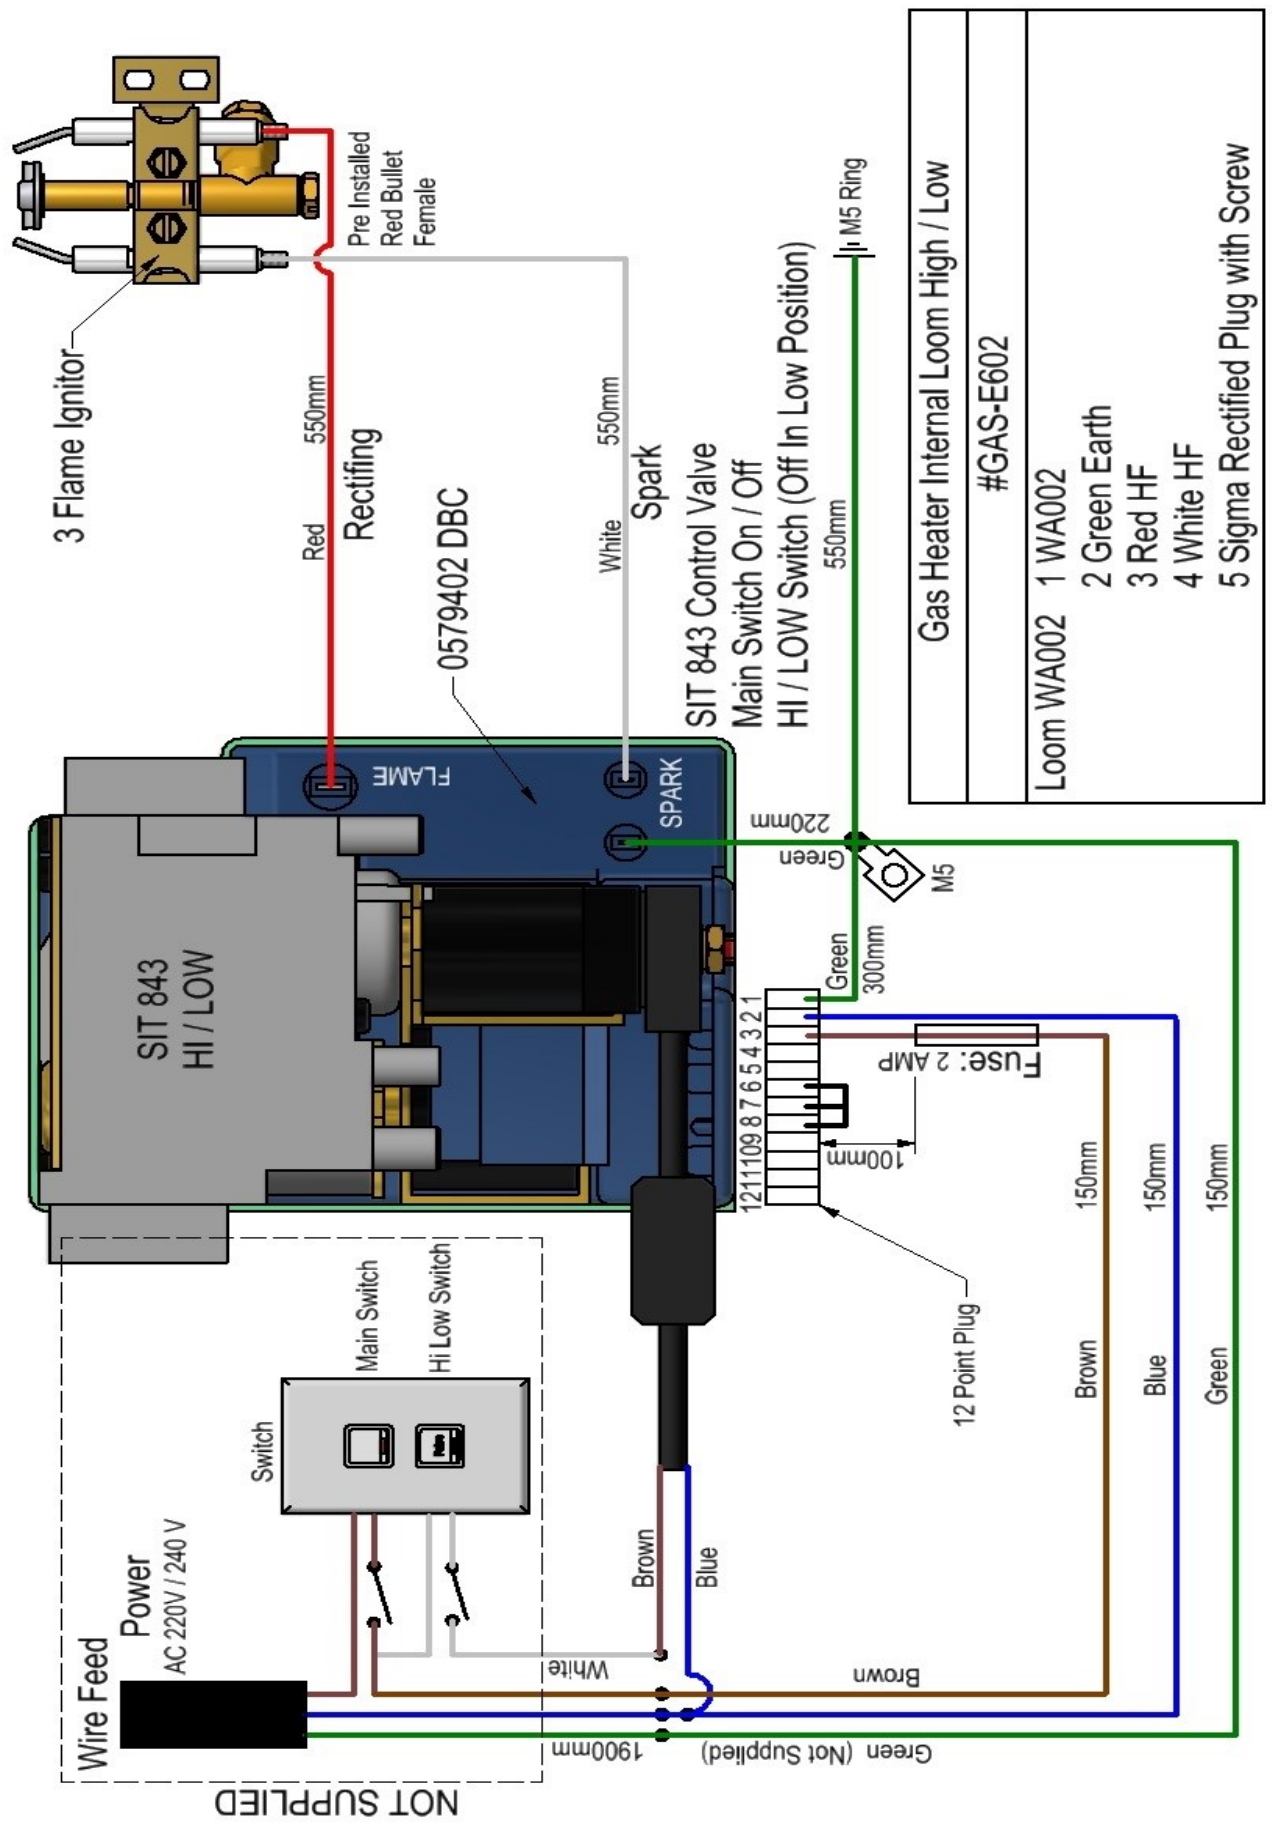

GENERAL NOTES**NOTES:**

- These installation and operating instructions should be kept in a safe place. Should you require another copy, download from the **Warmington** website www.warmington.co.nz.
- Warranty - for full details on product warranties, contact your local Authorised Warmington Retailer.
- Correct installation, operation and maintenance must be maintained to comply with the **Warmington** Warranty.
- The appliance and flue system must be installed in accordance with relevant standards and the appropriate building codes.
- This appliance must be serviced annually and any service operation must be carried out by a qualified service person.

WARNINGS:

- **WARNING; ANY MODIFICATION OF THE APPLIANCE THAT HAS NOT BEEN APPROVED IN WRITING BY THE TESTING AUTHORITY IS CONSIDERED A BREACH OF NZ STANDARDS.**
- **WARNING; DO NOT USE OR STORE FLAMMABLE LIQUIDS OR AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILST IN OPERATION.**
- **WARNING; DO NOT PLACE FLAMMABLE MATERIALS ON OR AGAINST THIS APPLIANCE.**
- **CAUTION:** THIS APPLIANCE SHOULD BE MAINTAINED AND OPERATED AT ALL TIMES IN ACCORDANCE WITH THESE INSTRUCTIONS.
- **CAUTION:** ALL SERVICING MUST BE CARRIED OUT BY AN AUTHORISED SERVICE TECHNICIAN.
- **CAUTION:** MAKE SURE THE USE OF CORRECT FUEL TYPE WITH THIS APPLIANCE.

Keep a copy of these instructions for operating and maintenance guidelines.



Industries 1994 LTD
PO Box 58652, Botany 2163, Auckland
www.warmington.co.nz