
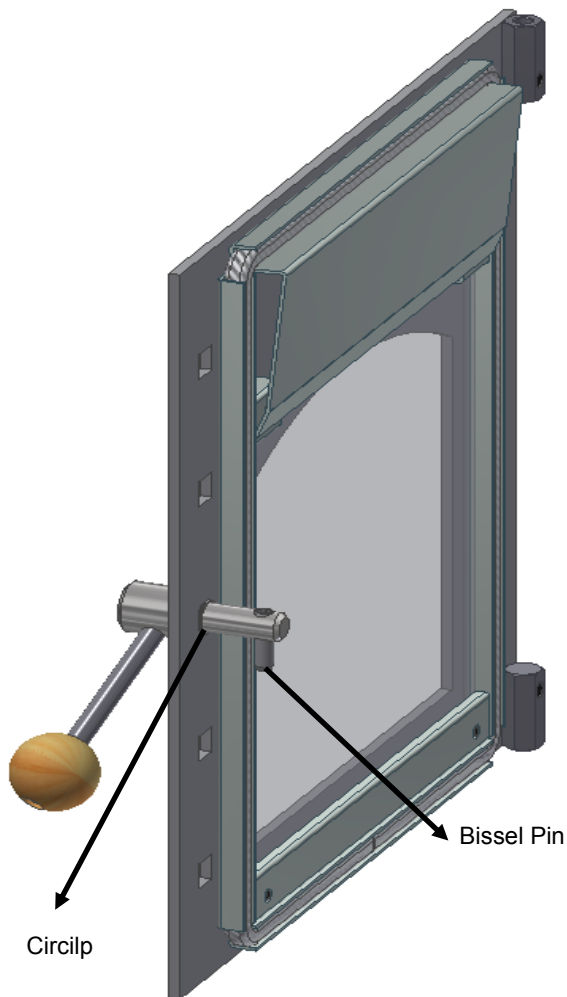


Studio Door Handle Fitment

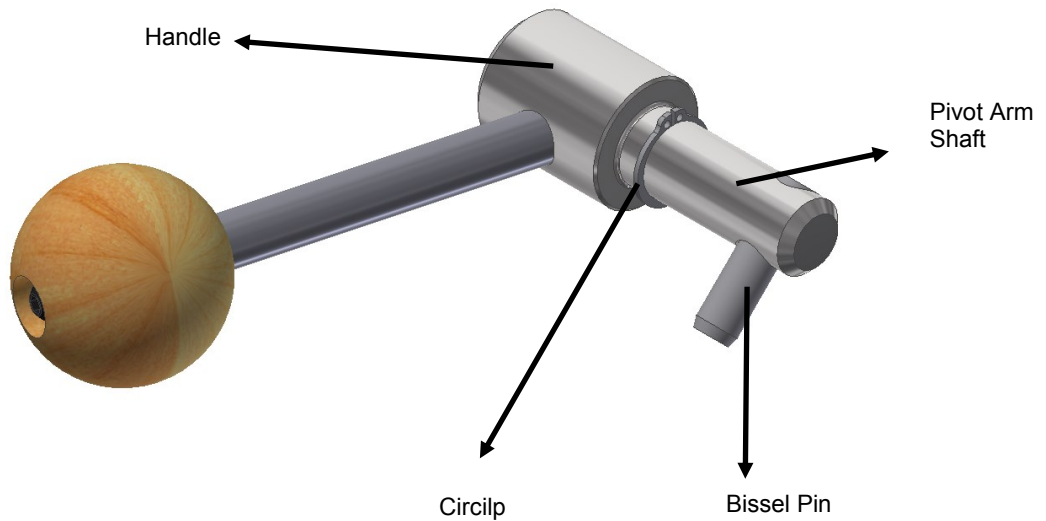

1. Insert the handle through the door so that the Pivot arm shaft in in the inside.
2. Place the circlip on the end to hold the handle in place.
3. Insert the Bissel pin into the hole from the top. Use a hammer to do this, with a piece of wood over the top of the Bissel pin to ensure you do not damage the top of the pin.